



# **ski-doo**®

**2002**

## **Shop Manual**

**Volume 1**

**Tundra R  
Skandic**

**LT/WT/SWT/WT LC**



**484 200 032**

# **2002 Shop Manual**

**VOLUME 1**

TUNDRA R  
SKANDIC LT/WT/SWT/WT LC

**BOMBARDIER**  
*RECREATIONAL PRODUCTS*



Legal deposit:

National Library of Quebec

4<sup>th</sup> trimester 2001

National Library of Canada 2001

All rights reserved. No parts of this manual may be reproduced in any form without the prior written permission of Bombardier Inc.

©Bombardier Inc. 2001

Technical Publications

Bombardier Inc.

Valcourt (Quebec) Canada

Printed in Canada

®\*Registered trademarks of Bombardier Inc.

This document contains the trademarks of the following companies:

Crest® is a trademark of Crest Industries Inc.

Comet® is a trademark of Hoffco/Comet Industries Inc.

Kimtowels® is a trademark of Kimberly-Clark

Loctite® is a trademark of Loctite Corporation

Molykote® is a trademark of Dow Corning Corporation

Silastic® is a trademark of Dow Corning Corporation

Snap-on® is a trademark of Snap-on Tools Corporation

Versilube® is a trademark of General Electric Company

Supertanium™ is a trademark of Premier Industrial Corporation

---

# TABLE OF CONTENTS

---

<b>SECTION</b>	<b>SUBSECTION</b>	<b>PAGE</b>
SAFETY NOTICE .....		III
WHAT'S NEW .....		IV
INTRODUCTION .....		V
<b>01</b>	<b>SERVICE TOOLS AND SERVICE PRODUCTS</b>	
	01 – Service tools.....	01-01-1
	02 – Service products.....	01-02-1
<b>02</b>	<b>LUBRICATION AND MAINTENANCE</b>	
	01 – Table of contents.....	02-01-1
	02 – Lubrication and maintenance chart .....	02-02-1
	03 – Storage .....	02-03-1
	04 – Preseason preparation.....	02-04-1
<b>03</b>	<b>TROUBLESHOOTING</b>	
	01 – Table of contents.....	03-01-1
	02 – Engine .....	03-02-1
	03 – Fuel and oil systems.....	03-03-1
	04 – Transmission and brake systems .....	03-04-1
	05 – Electrical system .....	03-05-1
	06 – Suspension and track .....	03-06-1
<b>04</b>	<b>ENGINE</b>	
	01 – Table of contents.....	04-01-1
	02 – 277 engine type.....	04-02-1
	03 – 443 and 503 engine types .....	04-03-1
	04 – 593 engine type .....	04-04-1
	05 – Leak test and engine dimension measurement .....	04-05-1
	06 – CDI system.....	04-06-1
	07 – Oil injection system.....	04-07-1
	08 – Axial fan cooling system.....	04-08-1
	09 – Liquid cooling system.....	04-09-1
	10 – Rewind starter.....	04-10-1
	11 – Carburetor and fuel pump .....	04-11-1
	12 – Fuel tank and throttle cable .....	04-12-1
<b>05</b>	<b>TRANSMISSION</b>	
	01 – Table of contents.....	05-01-1
	02 – Drive belt .....	05-02-1
	03 – Drive pulley.....	05-03-1
	04 – Driven pulley.....	05-04-1
	05 – Pulley distance and alignment.....	05-05-1
	06 – Brake .....	05-06-1
	07 – Chaincase .....	05-07-1
	08 – Gearbox.....	05-08-1
	09 – Drive chain.....	05-09-1
<b>06</b>	<b>ELECTRICAL</b>	
	01 – Table of contents.....	06-01-1
	02 – Ignition timing.....	06-02-1
	03 – Spark plugs.....	06-03-1
	04 – Battery .....	06-04-1
	05 – Electric starter .....	06-05-1
	06 – Testing procedure .....	06-06-1

---

---

# TABLE OF CONTENTS

---

<b>SECTION</b>	<b>SUBSECTION</b>	<b>PAGE</b>
<b>07</b> REAR SUSPENSION	01 – Table of contents .....	07-01-1
	02 – Torque reaction suspension .....	07-02-1
	03 – Skandic WT suspension .....	07-03-1
	04 – Drive axle .....	07-04-1
	05 – Track .....	07-05-1
<b>08</b> STEERING/ FRONT SUSPENSION	01 – Table of contents .....	08-01-1
	02 – Steering system .....	08-02-1
	03 – Suspension and ski system .....	08-03-1
<b>09</b> BODY/FRAME	01 – Table of contents .....	09-01-1
	02 – Body .....	09-02-1
	03 – Frame .....	09-03-1
<b>10</b> TECHNICAL DATA	01 – SI metric information guide.....	10-01-1
	02 – Engines .....	10-02-1
	03 – Vehicles.....	10-03-1
	04 – Technical data legends.....	10-04-1
<b>11</b> WIRING DIAGRAMS	01 – Wiring diagrams .....	11-01-1

---

# SAFETY NOTICE

This manual has been prepared as a guide to correctly service and repair some 2002 Ski-Doo snowmobiles. See model list below.

This edition was primarily published to be used by snowmobile mechanic technicians who are already familiar with all service procedures relating to Bombardier made snowmobiles. Mechanic technicians should attend continuous training courses given by Bombardier Training Dept.

Please note that the instructions will apply only if proper hand tools and special service tools are used.

This *Shop Manual* uses technical terms which may be slightly different from the ones used in the *Parts Catalog*.

It is understood that this manual may be translated into another language. In the event of any discrepancy, the English version shall prevail.

The content depicts parts and/or procedures applicable to the particular product at time of writing. *Service* and *Warranty Bulletins* may be published to update the content of this manual. Make sure to read and understand these.

In addition, the sole purpose of the illustrations throughout the manual, is to assist identification of the general configuration of the parts. They are not to be interpreted as technical drawings or exact replicas of the parts.

The use of Bombardier parts is most strongly recommended when considering replacement of any component. Dealer and/or distributor assistance should be sought in case of doubt.

The engines and the corresponding components identified in this document should not be utilized on product(s) other than those mentioned in this document.

Torque wrench tightening specifications must be strictly adhered to. Locking devices (ex.: locking tab, self-locking fasteners, etc.) must be installed or replaced with new ones. If the efficiency of a locking device is impaired, it must be renewed.

This manual emphasizes particular information denoted by the wording and symbols:

## **WARNING**

Identifies an instruction which, if not followed, could cause serious personal injury including possibility of death.

**CAUTION:** Denotes an instruction which, if not followed, could severely damage vehicle components.

**NOTE:** Indicates supplementary information needed to fully complete an instruction.

Although the mere reading of such information does not eliminate the hazard, your understanding of the information will promote its correct use. Always use common shop safety practice.

Bombardier Inc. disclaims liability for all damages and/or injuries resulting from the improper use of the contents. We strongly recommend that any services be carried out and/or verified by a highly skilled professional mechanic. It is understood that certain modifications may render use of the vehicle illegal under existing federal, provincial and state regulations.

---

## **WHAT'S NEW**

---

# **WHAT'S NEW**

## **INTRODUCTION**

- Meaning of vehicle description decal.

## **SERVICE TOOLS 01-01**

- New countershaft bearing removal and installer tool for Skandic LT.

## **443 AND 503 ENGINE TYPES 04-03**

- Crankcase is now sealed with new sealing compound P/N 420 297 906 instead of Loctite 515.

## **593 ENGINE TYPES 04-04**

- New installation and removal procedure for piston pin tab type circlip.

## **OIL INJECTION SYSTEM 04-07**

- Different pump adjustments according to pump identification.

## **REWIND STARTER 04-10**

- New type of lubricant is used on all moving parts.

## **CARBURETOR AND FUEL PUMP 04-11**

- New installation and removal procedure for air silencer.

## **DRIVE BELT 05-02**

- New adjustment of drive belt.

## **IGNITION TIMING 06-02**

- New procedure for ignition timing.

## **BATTERY 06-04**

- New installation and removal procedure for battery.

# INTRODUCTION

This *Shop Manual Volume 1* covers the following Bombardier made 2002 snowmobiles:

MODELS	MODEL NUMBER
TUNDRA R (Canada and U.S.) .....	3278
SKANDIC* LT (Canada) .....	2101
SKANDIC* LT (U.S.) .....	2102
SKANDIC* WT (Canada).....	2099
SKANDIC* WT (U.S.) .....	2100
SKANDIC* SWT (Canada) .....	2097
SKANDIC* SWT (U.S.) .....	2098
SKANDIC* WT LC (Canada) .....	2095
SKANDIC* WT LC (U.S.) .....	2096

\*Trademarks of Bombardier Inc.

## Tundra R



TYPICAL — TUNDRA R

- Skandic LT**
- Skandic WT**
- Skandic SWT**
- Skandic WT LC**

These are Skandic series models.




A29A03A

TYPICAL — SKANDIC SERIES

## VEHICLE DESCRIPTION DECAL

### Vehicle Description Decal Location

Vehicle description decal is located on right hand side of tunnel.

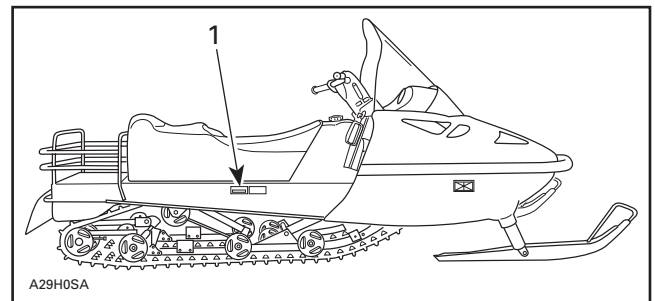


A29H05A

TYPICAL

1. Vehicle description decal

### Vehicle Description Decal Meaning

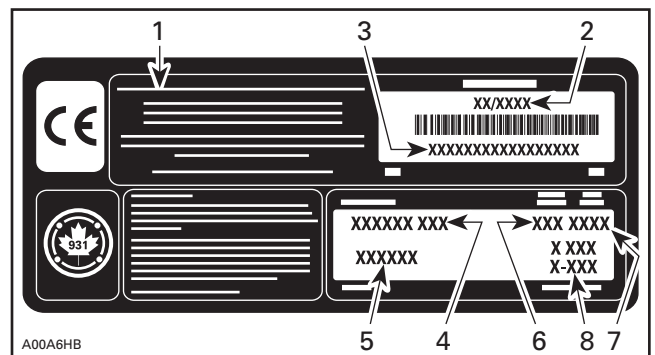

A00A6HB

#### VEHICLE DESCRIPTION DECAL

1. Manufacturer name and address
2. Manufacturing date
3. Vehicle identification number (VIN)
4. Model name
5. Option package
6. Engine type
7. Model year
8. Color codes




# INTRODUCTION

## Vehicle Identification Number (VIN) Location

VIN is scribed on vehicle description decal. See above. It is also embossed on tunnel near vehicle description decal.


## Vehicle Identification Number Meaning

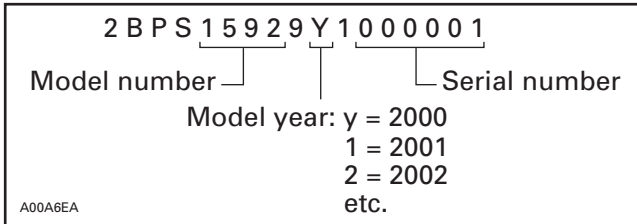

## ENGINE SERIAL NUMBER

### Engine Serial Number Location


#### *Fan-Cooled Engines*

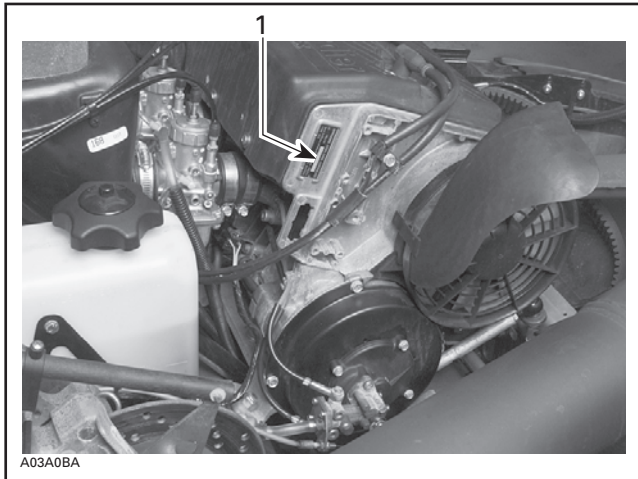

TYPICAL — FAN-COOLED ENGINES

1. Engine serial number

#### *Liquid-Cooled Engines*

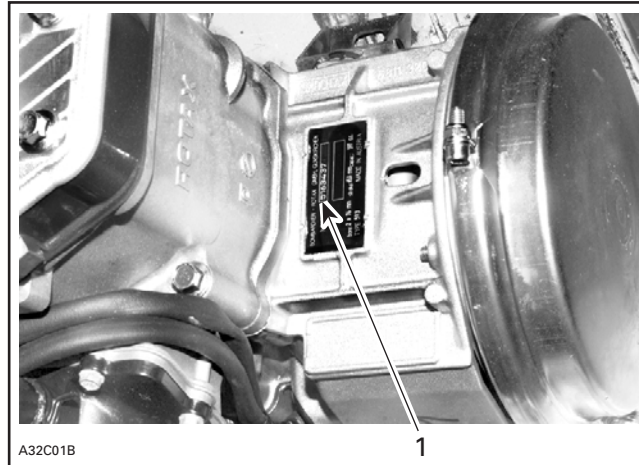

TYPICAL — LIQUID-COOLED ENGINES

1. Engine serial number

## LIST OF ABBREVIATIONS USED IN THIS MANUAL

A	ampere
amp	ampere
A•h	ampere-hour
AC	alternate current
ACM	acceleration and control modulator
ARM	advance ride management
BDC	bottom dead center
BTDC	before top dead center
°C	degree Celsius
cc	cubic centimeter
CDI	capacitor discharge ignition
CTR	center
cm	centimeter
cm <sup>2</sup>	square centimeter
cm <sup>3</sup>	cubic centimeter
DC	direct current
DPM	digital performance management
DSA	direct shock action
°F	degree Fahrenheit
FC	fan cooled
fl. oz	fluid ounce
ft	foot
GRD	ground
H.A.C.	high altitude compensator
hal.	halogen
HI	high
imp. oz	imperial ounce
in	inch
in <sup>2</sup>	square inch
in <sup>3</sup>	cubic inch
k	kilo (thousand)
kg	kilogram
km/h	kilometer per hour
kPa	Kilopascal
L	liter
lb	pound

lbf	pound (force)
lbf/in <sup>2</sup>	pound per square inch
LH	left hand
LO	low
LT	long track
m	meter
MAG	magneto
Max.	maximum
Min.	minimum
mL	milliliter
mm	millimeter
MPEM	multi-purpose electronic module
MPH	mile per hour
N	newton
N.A.	not applicable
no.	number
00.0	continuity
0.L	overload (open circuit)
O.D.	outside diameter
OPT	optional
oz	ounce
P/N	part number
PSI	pound per square inch
PTO	power take off
R	rectangular
RH	right hand
RAVE	rotax adjustable variable exhaust
RPM	revolution per minute
RMS	root mean square
RRIM	reinforced reaction injection molding
Sp. Gr.	specific gravity
ST	semi-trapezoidal
TDC	top dead center
TRA	total range adjustable
U.S. oz	ounce (United States)
V	volt
Vac	volt (alternative current)

---

# INTRODUCTION

---

## ARRANGEMENT OF THE MANUAL


The manual is divided into 11 major sections:

- 01 SERVICE TOOLS AND SERVICE PRODUCTS
- 02 LUBRICATION AND MAINTENANCE
- 03 TROUBLESHOOTING
- 04 ENGINE
- 05 TRANSMISSION
- 06 ELECTRICAL
- 07 REAR SUSPENSION
- 08 STEERING/FRONT SUSPENSION
- 09 BODY/FRAME
- 10 TECHNICAL DATA
- 11 WIRING DIAGRAMS

Each section is divided in various subsections, and again, each subsection has one or more division.

This *Shop Manual* uses technical terms which may be slightly different from the ones in the parts catalog.

## TYPICAL PAGE

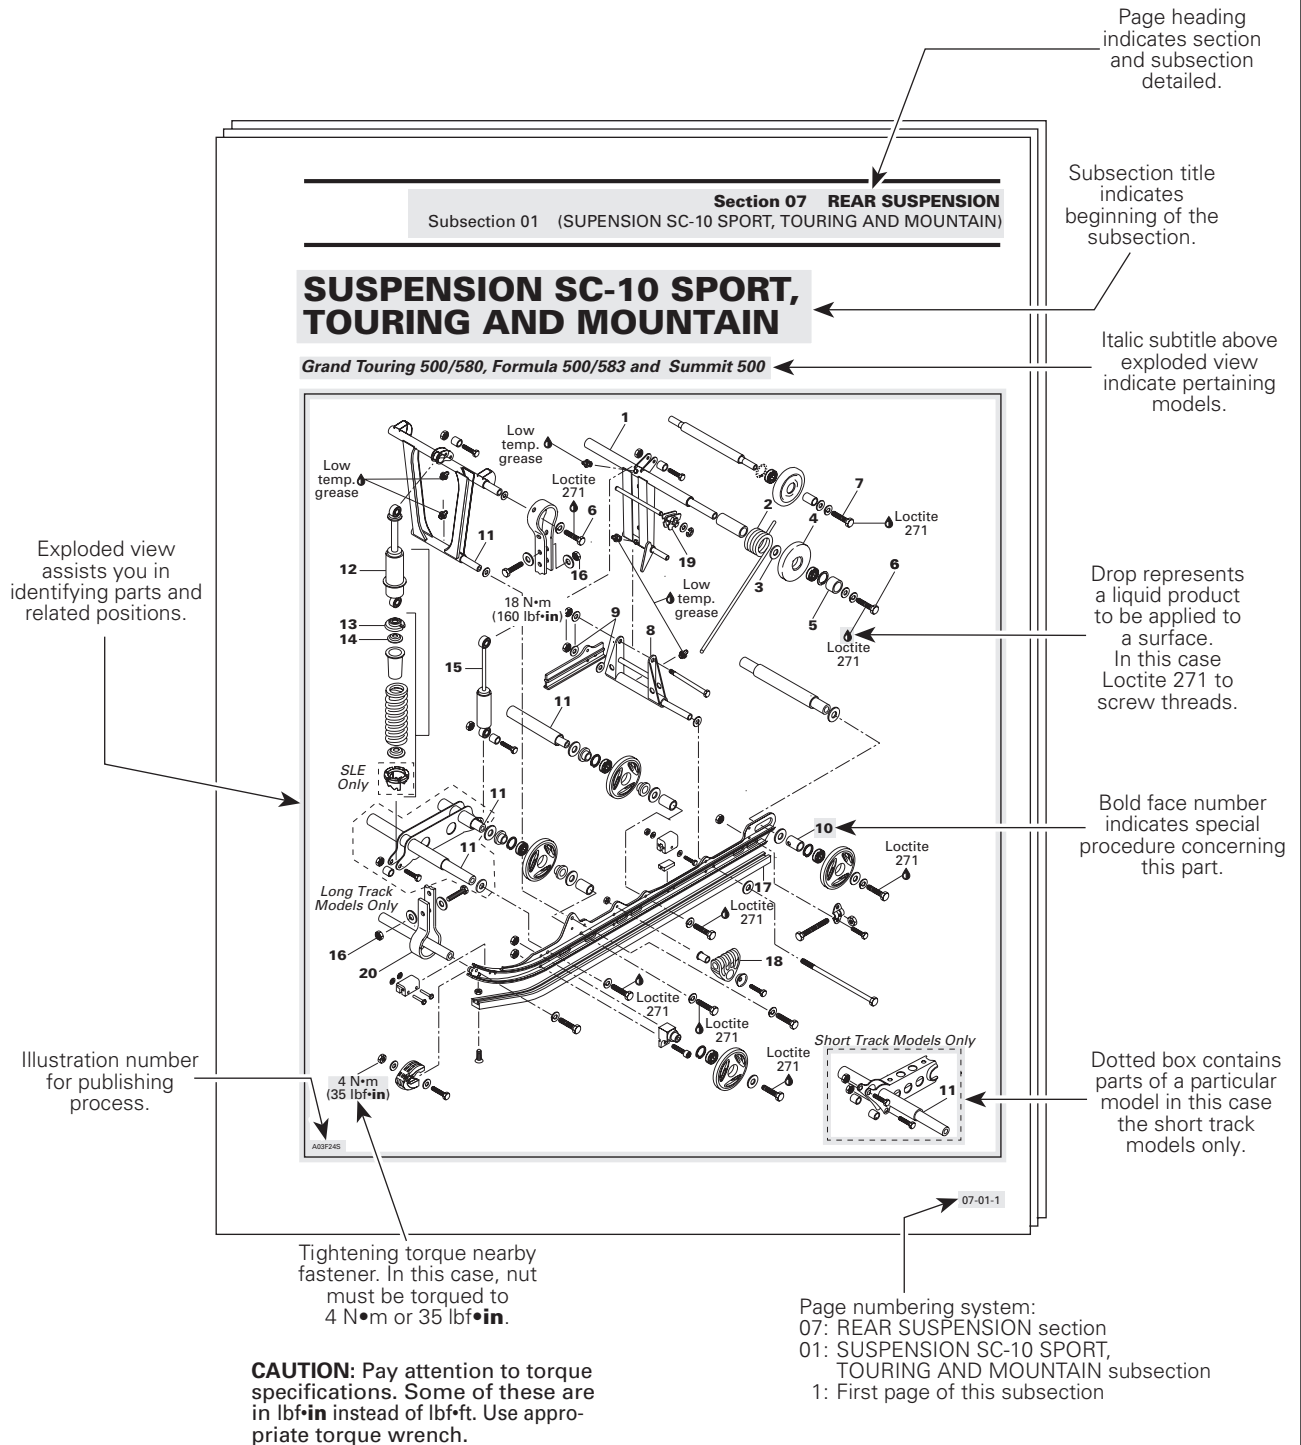


A01A28S

# INTRODUCTION

## TYPICAL PAGE


### Section 05 TRANSMISSION Subsection 03 (DRIVEN PULLEY)

Turn puller handle and sliding half at once to extract the bushing.

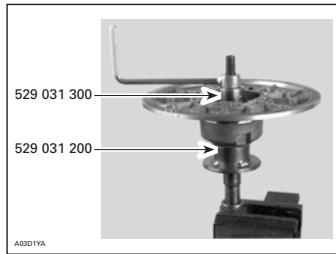

**IMPORTANT:** Large bushing retaining screws and washers must be removed before small bushing installation.

Coat bushing outside diameter with Loctite 609 (P/N 413 703 100).  
Install bushing as following photo.

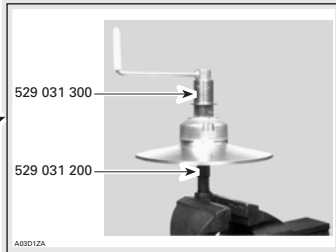

#### ASSEMBLY

##### Came Slider Shoe

When replacing slider shoes no. 4, always install a new set (3 shoes) to maintain equal pressure on the cam.

Assemble driven pulley components by reversing the disassembly procedure.

##### Cam

Coat cam **no. 18** interior with anti-seize lubricant.

MMR2000\_042\_00-02A.FM

05-03-5

#### INSTALLATION

##### Countershaft

**CAUTION:** Always apply anti-seize lubricant (P/N 413 701 000) on the countershaft before final pulley installation.


##### *A-Series and B-Series Only*

Should installation procedure be required, refer to BRAKE then look for Brake Disc and Countershaft Bearing Adjustment.

Reinstall the pulley on the countershaft by reversing the removal procedure.

##### All Models

Check end play of driven pulley on countershaft by pushing pulley towards outer housing so that the inner shims (P/N 504 108 200) contact it. Measure end play at the mounting screw end between shim(s) and pulley. See illustration.

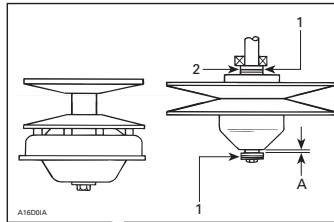

TYPICAL — TOP VIEW

- 1. Shim (P/N 504 108 200) (as required)
- 2. Contact
- A. 0.2 to 1 mm (0 to 3/64 in)

Torque retaining screw no. 13 to 25 N•m (18 lbf•ft).

#### ADJUSTMENT

Refer to PULLEY DISTANCE AND ALIGNMENT to adjust pulley distance. Adjust drive belt height between pulley halves to obtain specified belt deflection.

Title indicates main procedure to be carried-out.

Italic bold face type setting indicates a particular procedure concerning a model.

Italic bold face setting in this case indicates that particular procedure for A and B-Series is finished, so from this point, all models are concerned.

“TYPICAL” caption indicates a general view which does not represent full detail.

“TOP VIEW” caption helps you in understanding illustration.

Call-outs for above illustration.

Reference to look up a certain section and subsection. In this case it concerns pulleys adjustment.

Illustration always follows text to which it pertains.

Subtitle indicates a particular procedure for the named part.

Bold face number following part name refers to exploded view at beginning of subsection.

## GENERAL INFORMATION

The information and component/system descriptions contained in this manual are correct at time of publication. Bombardier Inc. however, maintains a policy of continuous improvement of its products without imposing upon itself any obligation to install them on products previously manufactured.

Due to late changes, it may have some differences between the manufactured product and the description and/or specifications in this document.

Bombardier Inc. reserves the right at any time to discontinue or change specifications, designs, features, models or equipment without incurring obligation.

## ILLUSTRATIONS AND PROCEDURES


Illustrations and photos show the typical construction of the different assemblies and, in all cases, may not reproduce the full detail or exact shape of the parts shown. However, they represent parts which have the same or a similar function.

**CAUTION:** Most components of those vehicles are built with parts dimensioned in the metric system. Most fasteners are metric and must not be replaced by customary fasteners or vice versa. Mismatched or incorrect fasteners could cause damage to the vehicle or possible personal injury.

As many of the procedures in this manual are interrelated, we suggest, that before undertaking any task, you read and thoroughly understand the entire section or subsection in which the procedure is contained.

A number of procedures throughout the book require the use of special tools. Before commencing any procedure, be sure that you have on hand all the tools required, or approved equivalents.


The use of RIGHT and LEFT indications in the text, always refers to driving position (when sitting on vehicle).

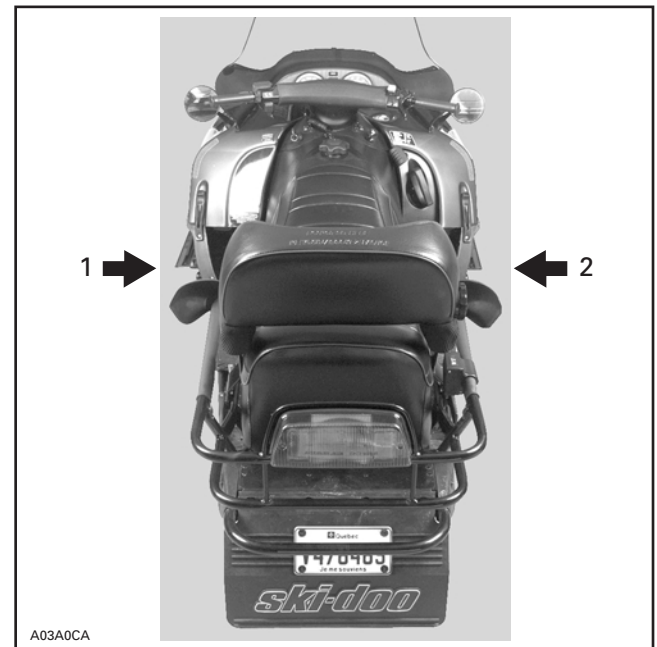

TYPICAL

1. Left
2. Right

## SELF-LOCKING FASTENERS PROCEDURE

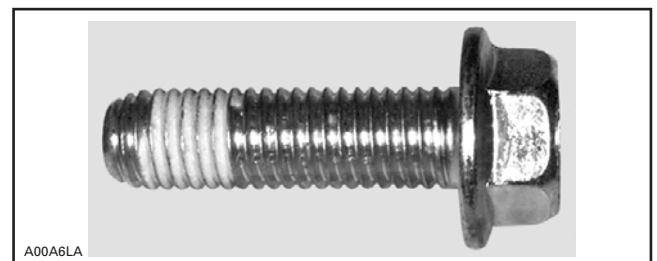

TYPICAL — SELF-LOCKING FASTENER

The following describes the most common application procedures when working with self-locking fasteners.

Use a metal brush or a screwtap to clean the hole properly then use a solvent (Methyl-Chloride), let act during 30 minutes and wipe off. The solvent utilization is to ensure the adhesive works properly.

# INTRODUCTION


## LOCTITE APPLICATION PROCEDURE

The following describes the most common application procedures when working with Loctite products.

**NOTE:** Always use proper strength Loctite product as recommended in this *Shop Manual*.

## THREADLOCKER


### Uncovered Holes (bolts and nuts)

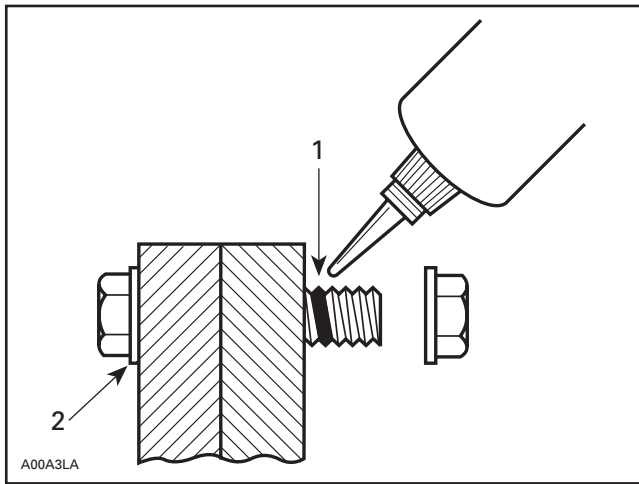

1. Apply here
2. Do not apply

1. Clean threads (bolt and nut) with solvent.
2. Apply Loctite Primer N (P/N 293 800 041) on threads and allow to dry.
3. Choose proper strength Loctite threadlocker.
4. Fit bolt in the hole.
5. Apply a few drops of threadlocker at proposed tightened nut engagement area.
6. Position nut and tighten as required.


### Blind Holes

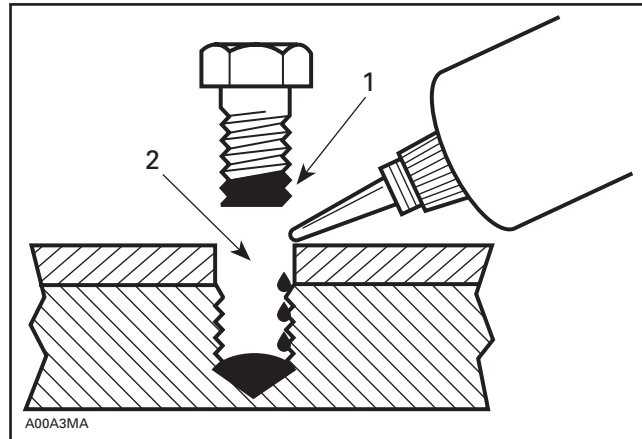

1. On threads
2. On threads and at the bottom of hole

1. Clean threads (bolt and hole) with solvent.
2. Apply Loctite Primer N (P/N 293 800 041) on threads (bolt and nut) and allow to dry for 30 seconds.
3. Choose proper strength Loctite threadlocker.
4. Apply several drops along the threaded hole and at the bottom of the hole.
5. Apply several drops on bolt threads.
6. Tighten as required.


### Stud in Blind Holes

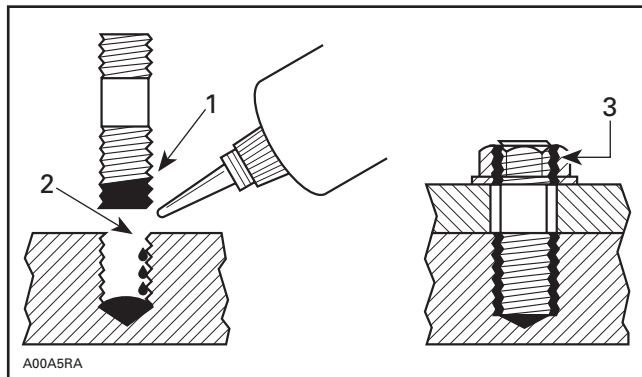

1. On threads
2. On threads and in the hole
3. Onto nut threads

1. Clean threads (stud and hole) with solvent.
2. Apply Loctite Primer N (P/N 293 800 041) on threads and allow to dry.
3. Put several drops of proper strength Loctite threadlocker on female threads and in hole.
4. Apply several drops of proper strength Loctite on stud threads.
5. Install stud.
6. Install cover, etc.
7. Apply drops of proper strength Loctite on un-covered threads.
8. Tighten nuts as required.

## Preassembled Parts

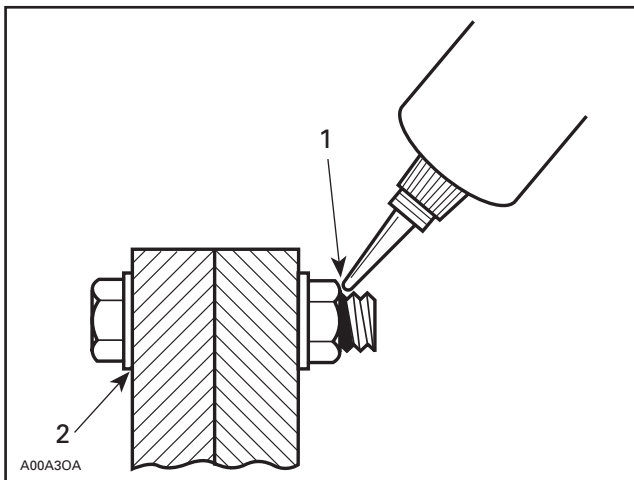


1. Apply here
2. Do not apply

1. Clean bolts and nuts with solvent.
2. Assemble components.
3. Tighten nuts.
4. Apply drops of proper strength Loctite on bolt/nut contact surfaces.
5. Avoid touching metal with tip of flask.

**NOTE:** For preventive maintenance on existing equipment, retighten nuts and apply proper strength Loctite on bolt/nut contact surfaces.

## Adjusting Screw

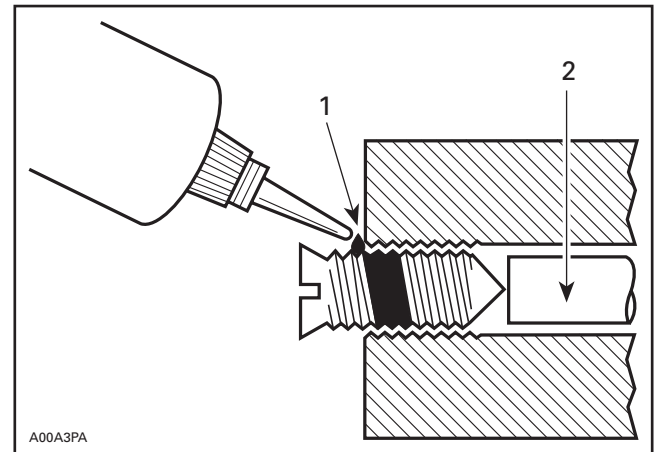


1. Apply here
2. Plunger

1. Adjust screw to proper setting.
2. Apply drops of proper strength Loctite threadlocker on screw/body contact surfaces.
3. Avoid touching metal with tip of flask.

**NOTE:** If it is difficult to readjust, heat screw with a soldering iron (232°C (450°F)).

## STRIPPED THREAD REPAIR

### Stripped Threads

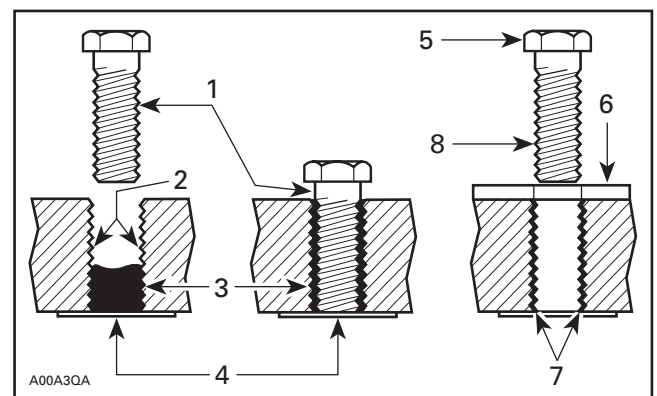

1. Release agent
2. Stripped threads
3. Form-A-Thread
4. Tape
5. Cleaned bolt
6. Plate
7. New threads
8. Threadlocker



# INTRODUCTION

## Standard Thread Repair

1. Follow instructions on Loctite FORM-A-THREAD (P/N 413 708 600) package.
2. If a plate is used to align bolt:
  - a. Apply release agent on mating surfaces.
  - b. Put waxed paper or similar film on the surfaces.
3. Twist bolt when inserting it to improve thread conformation.

**NOTE:** NOT intended for engine stud repairs.

## Repair of Small Holes/Fine Threads

Option 1: Enlarge damaged hole, then follow **Standard Thread Repair** procedure.


Option 2: Apply FORM-A-THREAD on the screw and insert in damaged hole.

## Permanent Stud Installation (light duty)

1. Use a stud or thread on desired length.
2. DO NOT apply release agent on stud.
3. Do a **Standard Thread Repair**.
4. Allow to cure for 30 minutes.
5. Assemble.

## GASKET COMPOUND

### All Parts

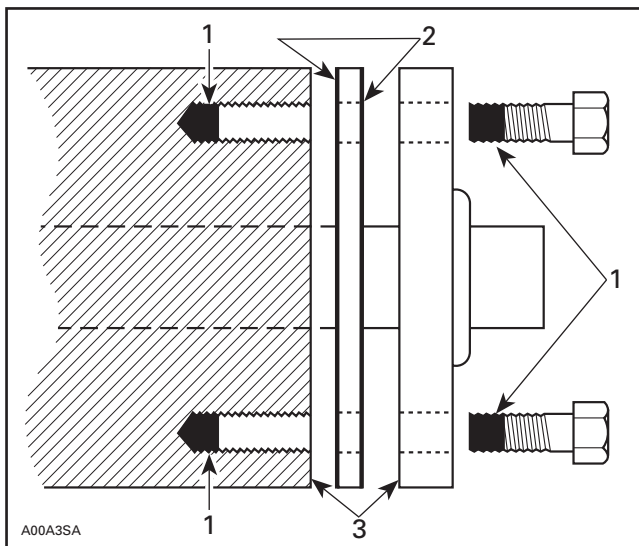

1. Proper strength Loctite
2. Loctite Primer N (P/N 413 708 100) and Gasket Eliminator 515 (P/N 413 702 700) on both sides of gasket
3. Loctite Primer N only

1. Remove old gasket and other contaminants with Loctite Chisel remover (P/N 413 708 500). Use a mechanical mean if necessary.

**NOTE:** Avoid grinding.

2. Clean both mating surfaces with solvent.
3. Spray Loctite Primer N on both mating surfaces and on both sides of gasket. Allow to dry 1 or 2 minutes.
4. Apply GASKET ELIMINATOR 515 (P/N 413 702 700) on both sides of gasket, using a clean applicator.

5. Place gasket on mating surfaces and assemble immediately.


**NOTE:** If the cover is bolted to blind holes (above), apply proper strength Loctite in the hole and on threads. Tighten.

If holes are sunken, apply proper strength Loctite on bolt threads.

6. Tighten as usual.

## MOUNTING ON SHAFT

### Mounting with a Press

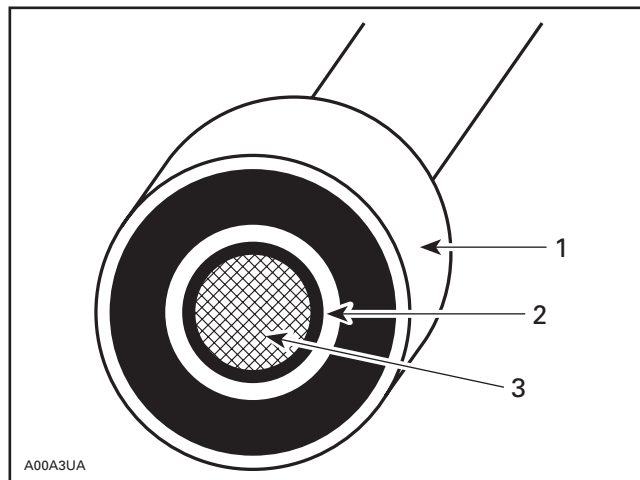

1. Bearing
2. Proper strength Loctite
3. Shaft

## Standard

1. Clean shaft external part and element internal part.
2. Apply a strip of proper strength Loctite on shaft circumference at insert or engagement point.

**NOTE:** Retaining compound is always forced out when applied on shaft.


3. DO NOT use anti-seize Loctite or any similar product.
4. No curing period is required.

## Mounting in Tandem

1. Apply retaining compound on internal element bore.
2. Continue to assemble as shown above.

## CASE-IN COMPONENTS

### Metallic Gaskets

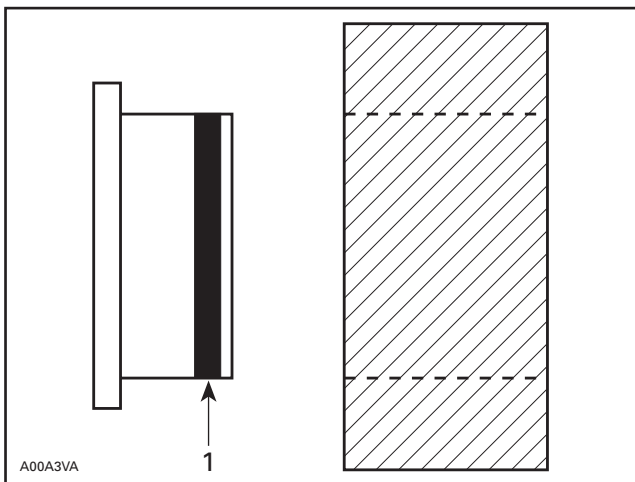

1. Proper strength Loctite

1. Clean inner housing diameter and outer gasket diameter.
2. Spray housing and gasket with Loctite Primer N (P/N 293 800 041).
3. Apply a strip of proper strength Loctite on leading edge of outer metallic gasket diameter.

**NOTE:** Any Loctite product can be used here. A low strength liquid is recommended as normal strength and gap are required.

4. Install according to standard procedure.
5. Wipe off surplus.
6. Allow it to cure for 30 minutes.

**NOTE:** Normally used on worn-out housings to prevent leaking or sliding.

It is generally not necessary to remove gasket compound applied on outer gasket diameter.

# INTRODUCTION

## TIGHTENING TORQUES

Tighten fasteners to torque mentioned in exploded views and text. When they are not specified refer to following table. All torques apply to 8.8 grade fasteners. Bold face size (e.g. **M4**) indicates nominal value (mean value).

N•m	FASTENER SIZE (8.8 GRADE)	Lbf•in
2	<b>M4</b>	18
3	M4	27
4	<b>M5</b>	35
8	M6	71
9	M6	80
10	<b>M6</b>	89
11	<b>M6</b>	97
12	<b>M6</b>	106

N•m	FASTENER SIZE (8.8 GRADE)	Lbf•ft
21	M8	15
22	M8	16
23	<b>M8</b>	17
24	M8	18
25	M8	18
43	M10	32
44	M10	32
45	M10	33
46	M10	34
47	M10	35
48	<b>M10</b>	35
49	M10	36
50	M10	37
51	M10	38
52	M10	38
53	M10	39
76	M12	56
77	M12	57
78	M12	58
79	M12	58
80	<b>M12</b>	59
81	M12	60
82	M12	60
83	M12	61
84	M12	62
121	M14	89
122	M14	90

N•m	FASTENER SIZE (8.8 GRADE)	Lbf•ft
123	M14	91
124	M14	91
125	M14	92
126	M14	93
127	M14	94
128	M14	94
129	M14	95
130	M14	96
131	M14	97
132	M14	97
133	M14	98
134	M14	99
135	<b>M14</b>	100
136	M14	100
137	M14	101
138	M14	102
139	M14	103
140	M14	103
141	M14	104
142	M14	105
143	M14	105
144	M14	106
145	M14	107
146	M14	108
147	M14	108
148	M14	109
149	M14	110
150	M14	111

TIGHTENING TORQUES FOR 8.8 GRADE BOLTS AND NUTS

# Bombardier SERVICE PUBLICATIONS REPORT

Publication title and year \_\_\_\_\_ Page \_\_\_\_\_

Machine \_\_\_\_\_ Report of error  Suggestion

*We would be pleased if you could communicate to Bombardier any suggestions you may have concerning our publications.*

---

---

---

---

---

Name \_\_\_\_\_

Address \_\_\_\_\_

City and State/Prov. \_\_\_\_\_ Date \_\_\_\_\_

Zip code/Postal code \_\_\_\_\_

---

# Bombardier SERVICE PUBLICATIONS REPORT

Publication title and year \_\_\_\_\_ Page \_\_\_\_\_

Machine \_\_\_\_\_ Report of error  Suggestion

---

---

---

---

---

Name \_\_\_\_\_

Address \_\_\_\_\_

City and State/Prov. \_\_\_\_\_ Date \_\_\_\_\_

Zip code/Postal code \_\_\_\_\_

---

# Bombardier SERVICE PUBLICATIONS REPORT

Publication title and year \_\_\_\_\_ Page \_\_\_\_\_

Machine \_\_\_\_\_ Report of error  Suggestion

---

---

---

---

---

Name \_\_\_\_\_

Address \_\_\_\_\_

City and State/Prov. \_\_\_\_\_ Date \_\_\_\_\_

Zip code/Postal code \_\_\_\_\_



AFFIX  
PROPER  
POSTAGE



**BOMBARDIER**  
*RECREATIONAL PRODUCTS*

Technical Publications  
After Sales Service  
565 de la Montagne Street  
Valcourt, Quebec, Canada J0E 2L0

AFFIX  
PROPER  
POSTAGE



**BOMBARDIER**  
*RECREATIONAL PRODUCTS*

Technical Publications  
After Sales Service  
565 de la Montagne Street  
Valcourt, Quebec, Canada J0E 2L0

AFFIX  
PROPER  
POSTAGE



**BOMBARDIER**  
*RECREATIONAL PRODUCTS*

Technical Publications  
After Sales Service  
565 de la Montagne Street  
Valcourt, Quebec, Canada J0E 2L0