



◆ **WARNING**

For safety reasons, this kit must be installed by an authorized Bombardier snowmobile dealer. Should removal of a locking device be required when undergoing disassembly/assembly, always replace with a new one. This instruction sheet should be given to the purchaser. This kit is designed for specific applicable models only. It is not recommended for vehicles other than those for which it was sold.

NOTE: Installation time is approximately 1 hour.

**PARTS TO BE INSTALLED**



1. Backrest Frame
2. Backrest Cushion
3. Support Plate (2)

4. Fastener Kit
5. Adjustment Screw (2)
6. Screw M8 (2)


## INSTRUCTIONS

### Preparation

Lean left side support plate **no. 3** against seat hinge and flush to the end of seat storage compartment.

**NOTE:** To identify left and right side support plate, note the height of the welded nuts. Lower welded nut must be facing seat storage compartment end.

Mark the 2 upper hole positions with a pencil, as shown on the next photo.

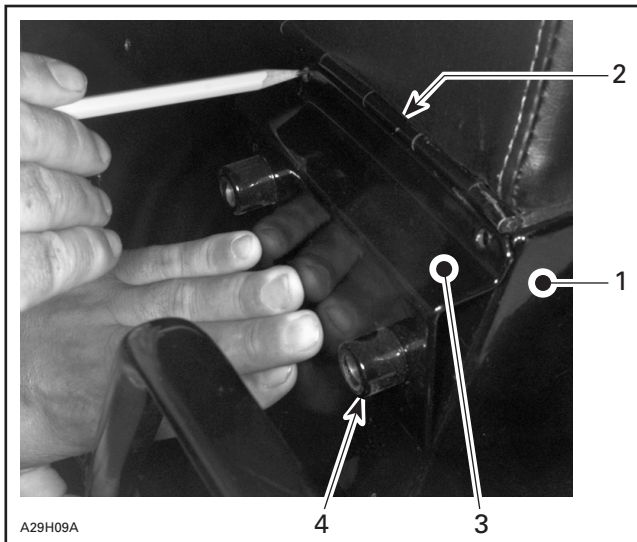

#### TYPICAL — LEFT SIDE SHOWN

1. End of seat storage compartment
2. Seat hinge
3. Left side support plate
4. Lower welded nut facing storage compartment end

Remove plate and using a punch, mark the 2 hole positions.

Drill holes with 13/64 in. drill bit.

Open seat then install support plate with screws, nuts and washers from fastener kit **no. 4**.

**NOTE:** Position washers and nuts from inside seat storage compartment.

Using support plate as a template, drill the 2 remaining holes and secure with screws, washers and nuts.

Repeat installation procedure for right side support plate.

Close seat.

### ▼ CAUTION


Ensure that right side support plate is properly aligned with the previously installed support.

### Backrest Installation

Install cushion cover onto backrest cushion **no. 2**.

**NOTE:** Cushion cover is especially shaped to fit backrest cushion. Ensure that cushion cover is properly positioned before installation.


Install cushion onto backrest frame **no. 1**, as shown on the following photo.

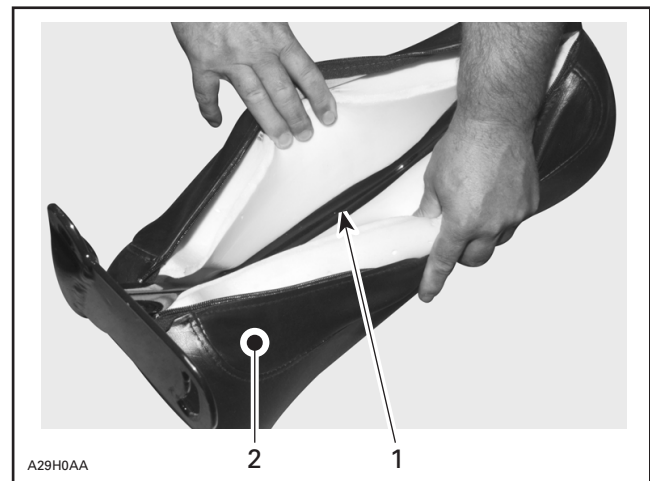

1. Backrest frame
2. Backrest cushion

Close backrest cushion zipper and adjust cushion for proper fit with frame.

Install backrest on vehicle and secure with screws **no. 6**, adjustment screws **no. 5** and washers. Refer to the following photo for proper positioning.

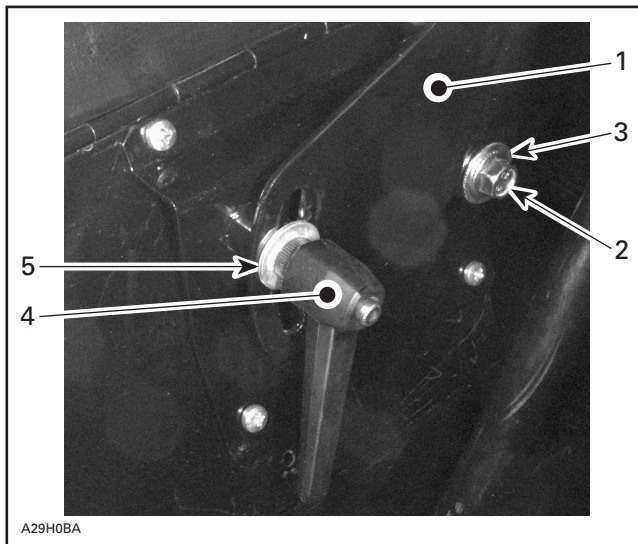

*TYPICAL — LEFT SIDE SHOWN*

1. Backrest frame
2. Screw M8
3. Washer
4. Adjustment screw
5. Washer

Adjust backrest and tighten. Refer to the last photo.



*TYPICAL — BACKREST PROPERLY INSTALLED*