



◆ **WARNING :** For safety reasons, this kit must be installed by an authorized Bombardier snowmobile dealer. Should removal of a locking device be required when undergoing disassembly/assembly, always replace with a new one. This instruction sheet should be given to the purchaser. This kit is designed for specific applicable models only. It is not recommended for vehicles other than those for which it was sold.

○ **NOTE :** Installation time is approximately 0.5 hour.

## PARTS TO BE INSTALLED



1. Backrest
2. Mounting Bracket (2)
3. Screw M8 (8)


4. Flanged Elastic Nut M8 (4)
5. Lock Washer (4)

# INSTRUCTIONS

Drill rear holes each side of the tunnel as illustrated. For measurement B only, refer to following table.

	SINGLE SEAT	DOUBLE SEAT
LONG TRACK	609 mm (24 in)	320 mm (12-5/8 in)
SHORT TRACK	419 mm (16-1/2 in)	111 mm (4-3/8 in)*

\*Position mounting bracket on higher adjustment only.

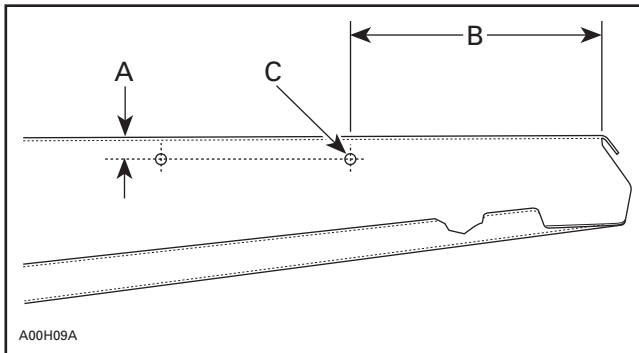


- A. 16 mm (5/8 in)
- B. Refer to the above table
- C. 6.5 mm (1/4 in)

Install mounting bracket **no. 2** on the vehicle. Hold bracket with 2 screws **no. 3** and 2 flanged elastic nuts **no. 4** (hand tighten).

Drill the other 2 holes using mounting bracket holes as a template.


Complete mounting brackets installation with 2 screws and 2 flanged elastic nuts.

**NOTE** : Mounting brackets can be turned over for higher backrest adjustment, as shown.

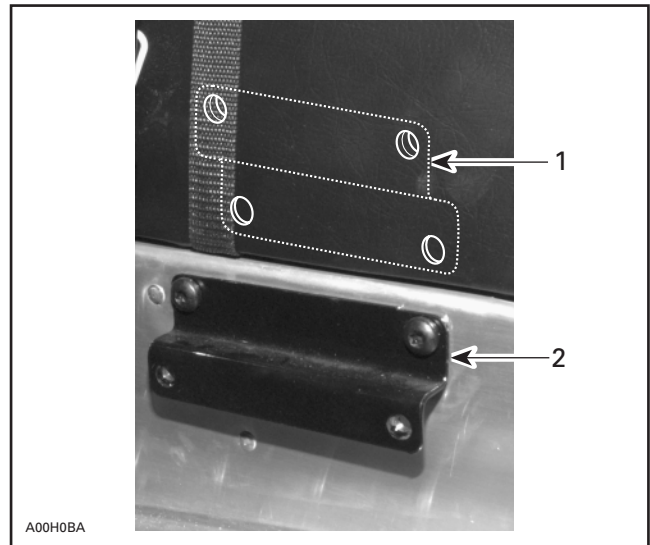

- 1. Mounting bracket installation for HIGH backrest adjustment
- 2. Mounting bracket installation for LOW backrest adjustment

Slide backrest on mounting brackets, as shown, and secure with 4 screws **no. 3** and 4 lock washers **no. 5**.

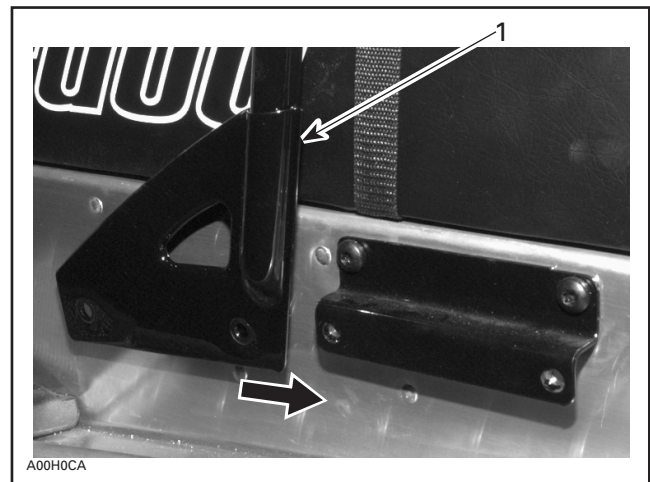

- 1. Slide backrest on mounting bracket

## 861 7552 00

1.	415 0654 00	Backrest	Dossier
2.	517 2872 00	Mounting Bracket (2)	Support de fixation (2)
3.	732 6012 50	Screw M8 (8)	Vis M8 (8)
4.	228 7810 45	Flanged Elastic Nut M8 (4)	Écrou d'arrêt élastique M8 (4)
5.	224 7811 40	Lock Washer (4)	Rondelle-frein (4)