




**◆ WARNING**

For safety reasons, this kit must be installed by an authorized Bombardier Ski-Doo snowmobile dealer. Should removal of a locking device be required when undergoing disassembly/assembly, always replace with a new one. This instruction sheet should be given to the purchaser after modification. This kit is designed for a specific model only. It is not recommended for snowmobiles other than those for which it was sold.

NOTE: Installation time is approximately 0.5 hours.

**PARTS TO BE INSTALLED**

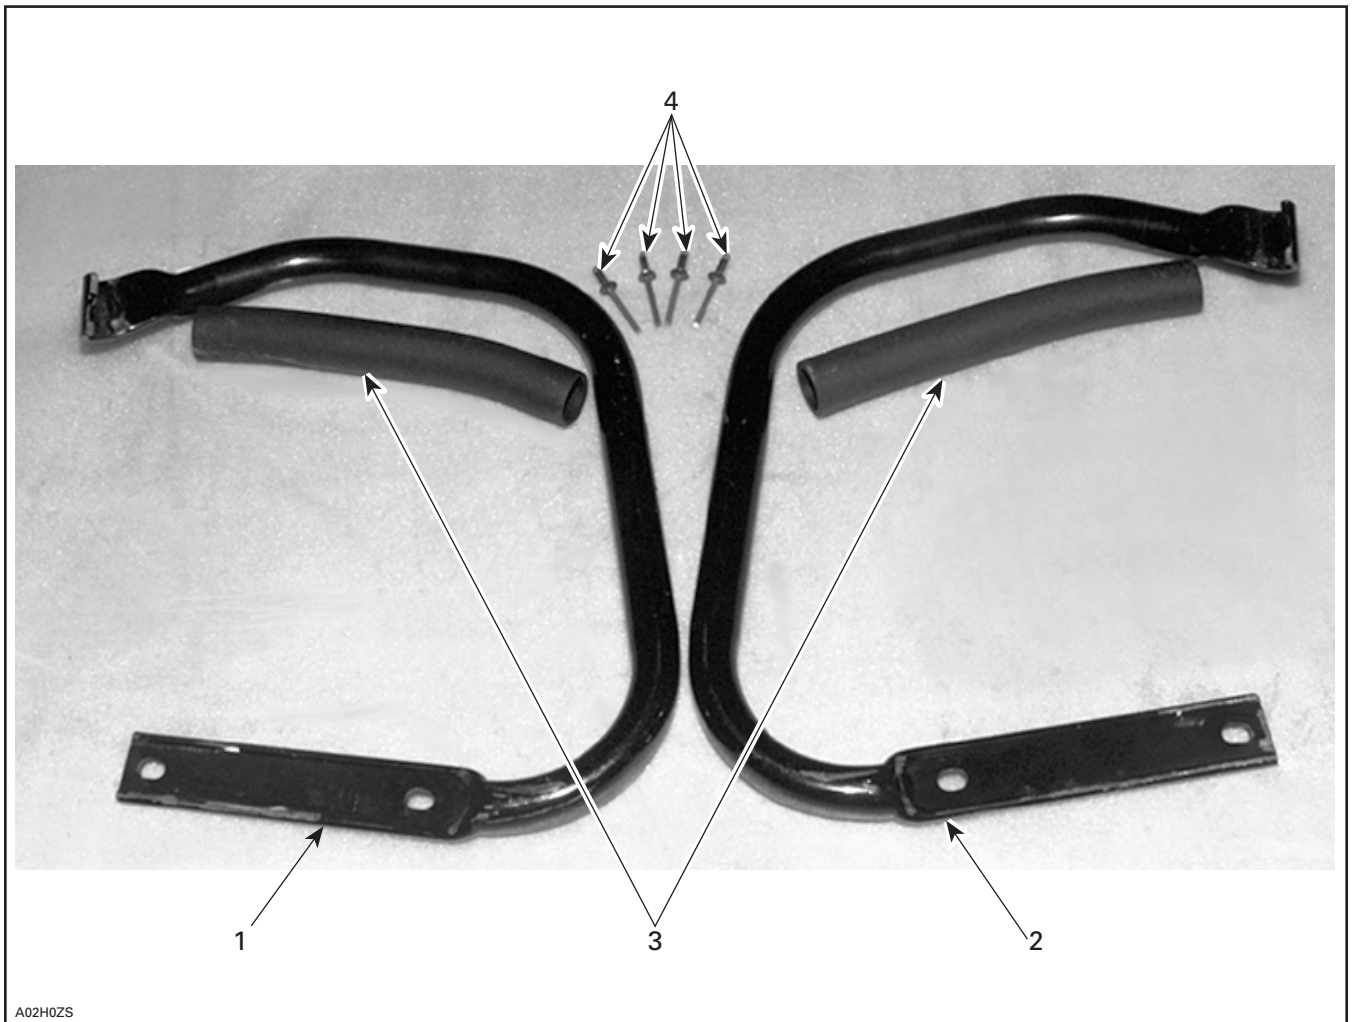


- 1. LH Grab Handle
- 2. RH Grab Handle

- 3. Grip Sheath (2)
- 4. Rivet (4)

## PROCEDURE

Slide grip sheath **no. 3** onto grab handle **no. 1**, starting at flat end of handle and lift it up to proper position. To ease installation use a solution of soapy water, one part of dishwasher soap and 40 parts of water.

Remove already existing back rest retaining bolts and insert flat end of grab handle inside frame.

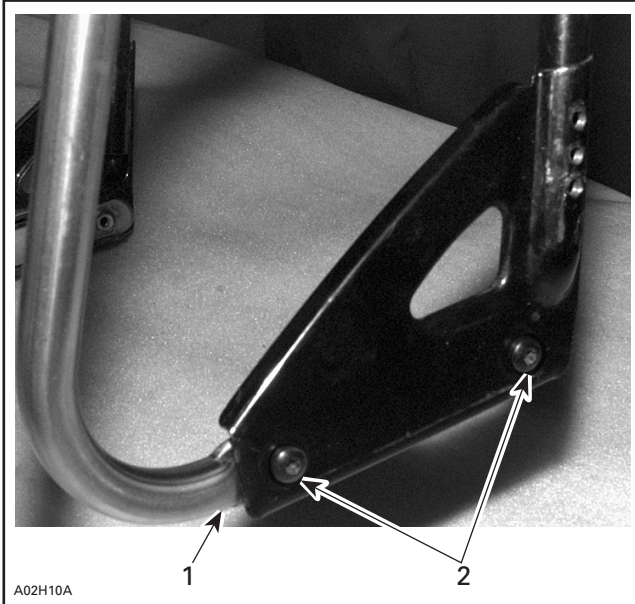


### LEFT SIDE SHOWN

1. Grab handle inside frame
2. Use existing bolts

Secure with same retaining bolts.


Where upper end of grab handle falls on back rest frame and using existing holes as template, drill holes in back rest frame and secure handle to frame with rivets **no. 4**.

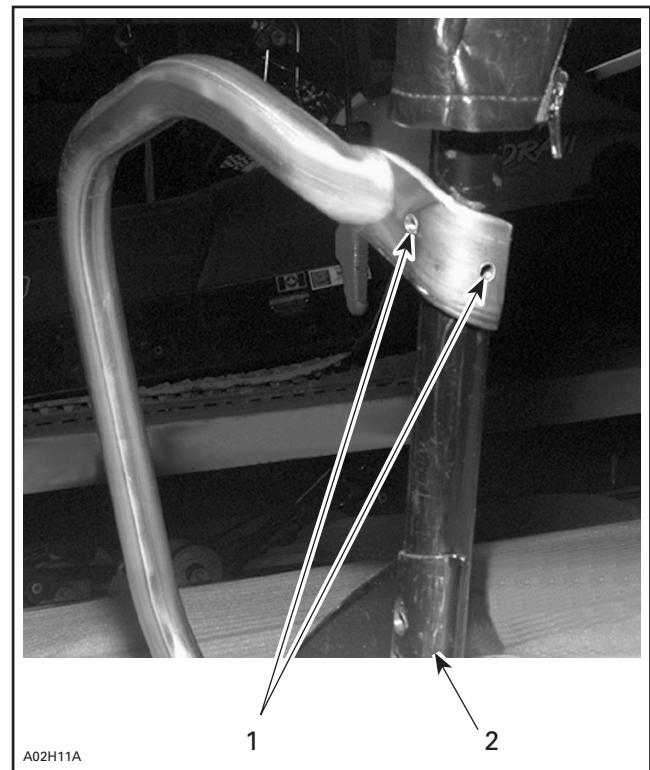

1. Existing holes
2. Back rest frame

Using grab handle **no. 2**, repeat same procedure for right side.

Following photo shows completed left side installation.

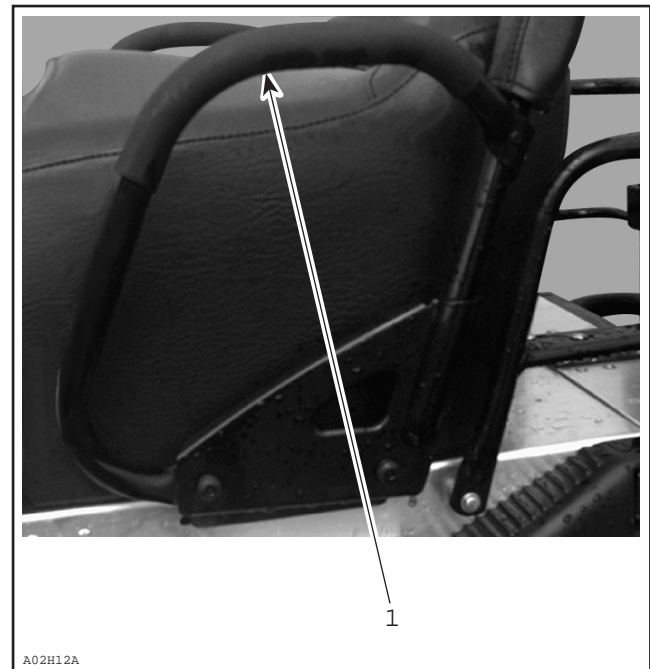

### FINAL LOOK

1. Grip sheath installed

**861 7653 00**

|    |             |                 |                            |
|----|-------------|-----------------|----------------------------|
| 1. | 517 2976 00 | Grab Handle LH  | Poignée de maintien gauche |
| 2. | 517 2975 00 | Grab Handle RH  | Poignée de maintien droite |
| 3. | 415 0503 00 | Grip Sheath (2) | Gaine (2)                  |
| 4. | 390 4036 00 | Rivet (4)       | Rivet (4)                  |