




◆ **WARNING**

For safety reasons, this kit must be installed by an authorized Bombardier snowmobile dealer. Should removal of a locking device be required when undergoing disassembly/assembly, always replace with a new one. This instruction sheet should be given to the purchaser. This kit is designed for specific applicable models only. It is not recommended for vehicles other than those for which it was sold.

NOTE: Installation time is approximately 0.5 hour.

PARTS TO BE INSTALLED

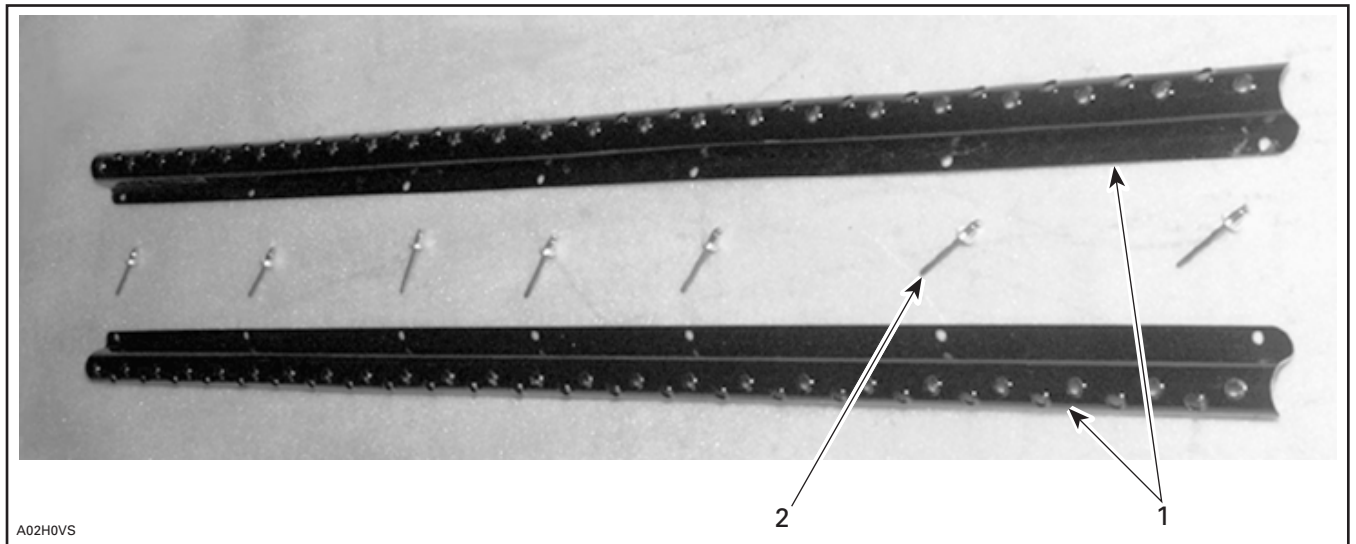


- 1. Non-Skid Strip (2)
- 2. Rivet (14)

PROCEDURE

Short Tunnel Models


Remove rear moulding.

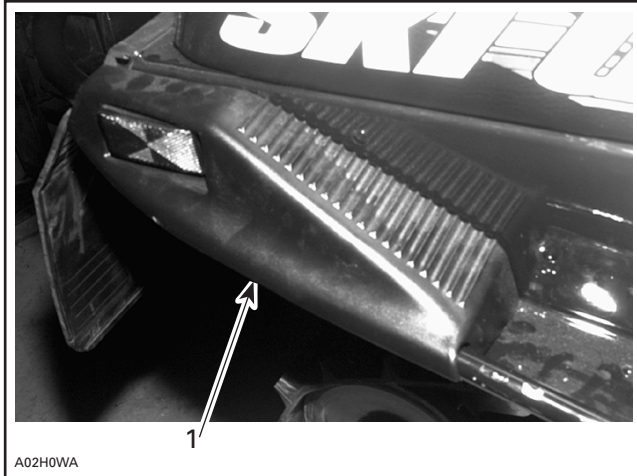

1. Remove rear moulding

Install strip **no. 1** on tunnel outer edge starting with front fit.

Push strip forward as far as possible.

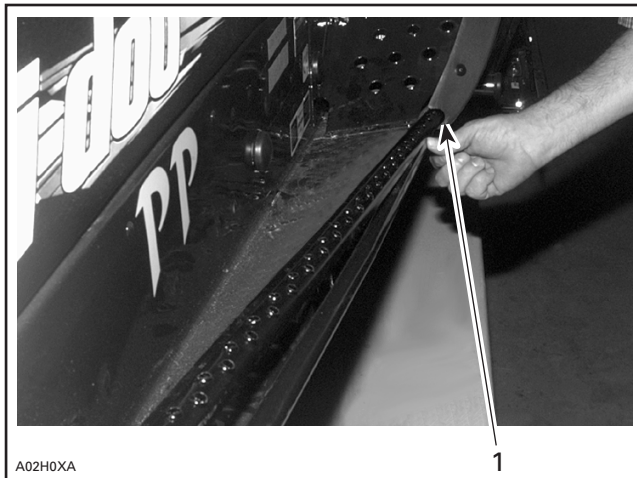

1. Push forward

Rest strip all along edge.

Using already existing holes as template, drill through tunnel.

Secure with rivets **no. 2**, installing the rivets from top of the tunnel.

Reinstall and secure rear moulding.

Repeat procedure for other side.

861 7652 00

1.	518 3194 01	Non-Skid Strip (2)	Bande antidérapante (2)
2.	390 4024 00	Rivet (14)	Rivet (14)