




### ◆ WARNING

For safety reasons, this kit must be installed by an authorized Bombardier snowmobile dealer. Should removal of a locking device be required when undergoing disassembly/assembly, always replace with a new one. This instruction sheet should be given to the purchaser. This kit is designed for specific applicable models only. It is not recommended for vehicles other than those for which it was sold.

NOTE: Installation time is approximately 0.5 hour.


### PARTS TO BE INSTALLED

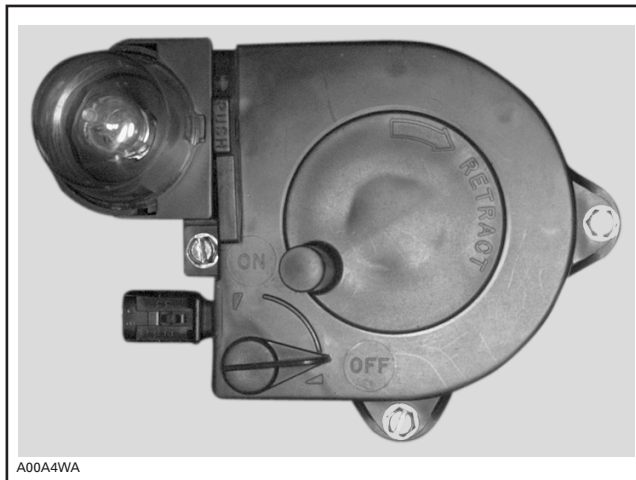

1. Reel Lamp
2. Wire Ass'y (not shown)

### PROCEDURE


Left side of air box or front of same, when coolant hose prevents side installation, would be a suitable location for the lamp. If such is the choice, secure lamp **no. 1** properly using hexagonal head self-tapping screws 12 x 3/4 (3), not supplied. Refer to following photos.

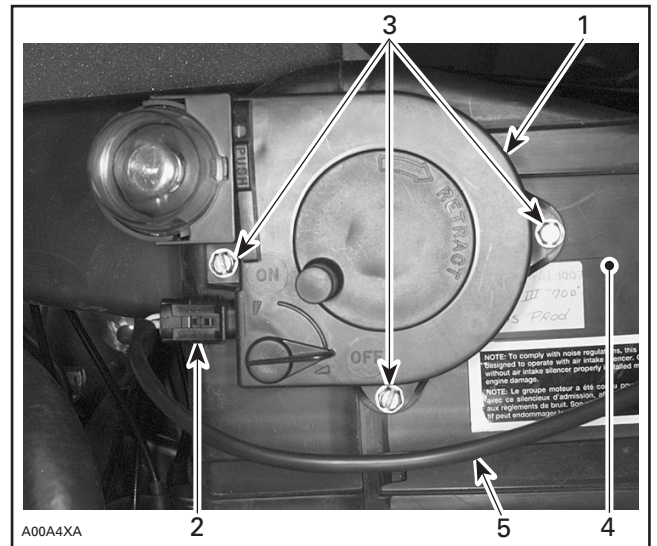

**SIDE OF AIR BOX**

1. Reel lamp
2. Connector
3. Hex. screws
4. Air box
5. Wire ass'y


**NOTE:** For S series models lamp must be lowered by about 31.75 mm (1-1/4 in) compared to photo in order to allow proper closing of hood.

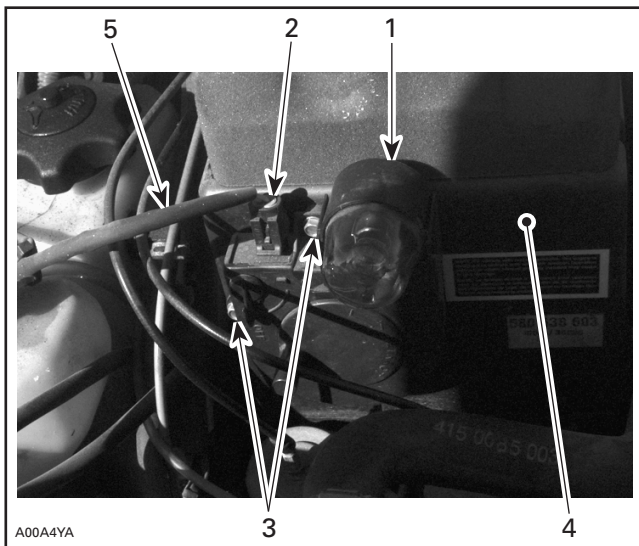

**FRONT OF AIR BOX**

1. Reel lamp
2. Connector
3. Hex. screws
4. Air box
5. Wire ass'y

Connect wire ass'y **no. 2** into provided connection on the lamp and route wire ass'y toward power source, the available connector in harness on right side for S series models and under console at center for CK3 series models. Refer to following photo.

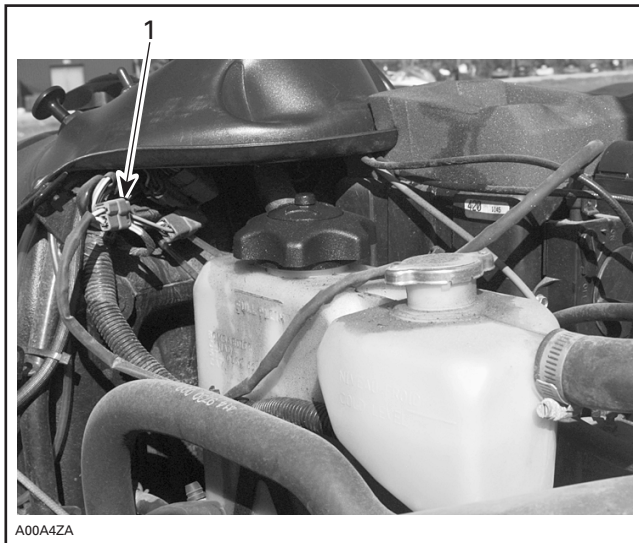

1. Power source available connector

Secure wire ass'y with locking ties (not supplied) where needed, so it won't hang loose.

Check lamp for proper operation.

861 7657 00

1.	515 1751 38	Reel Lamp	Baladeuse rétractable
2.	515 1751 39	Wire Ass'y (not shown)	Filage complet (non-illustré)