




◆ WARNING

For safety reasons, this kit must be installed by an authorized Bombardier snowmobile dealer. Should removal of a locking device be required when undergoing disassembly/assembly, always replace with a new one. This instruction sheet should be given to the purchaser. This kit is designed for specific applicable models only. It is not recommended for units other than those for which it was sold.

NOTE: Installation time is approximately 0.5 hour.

PARTS TO BE INSTALLED

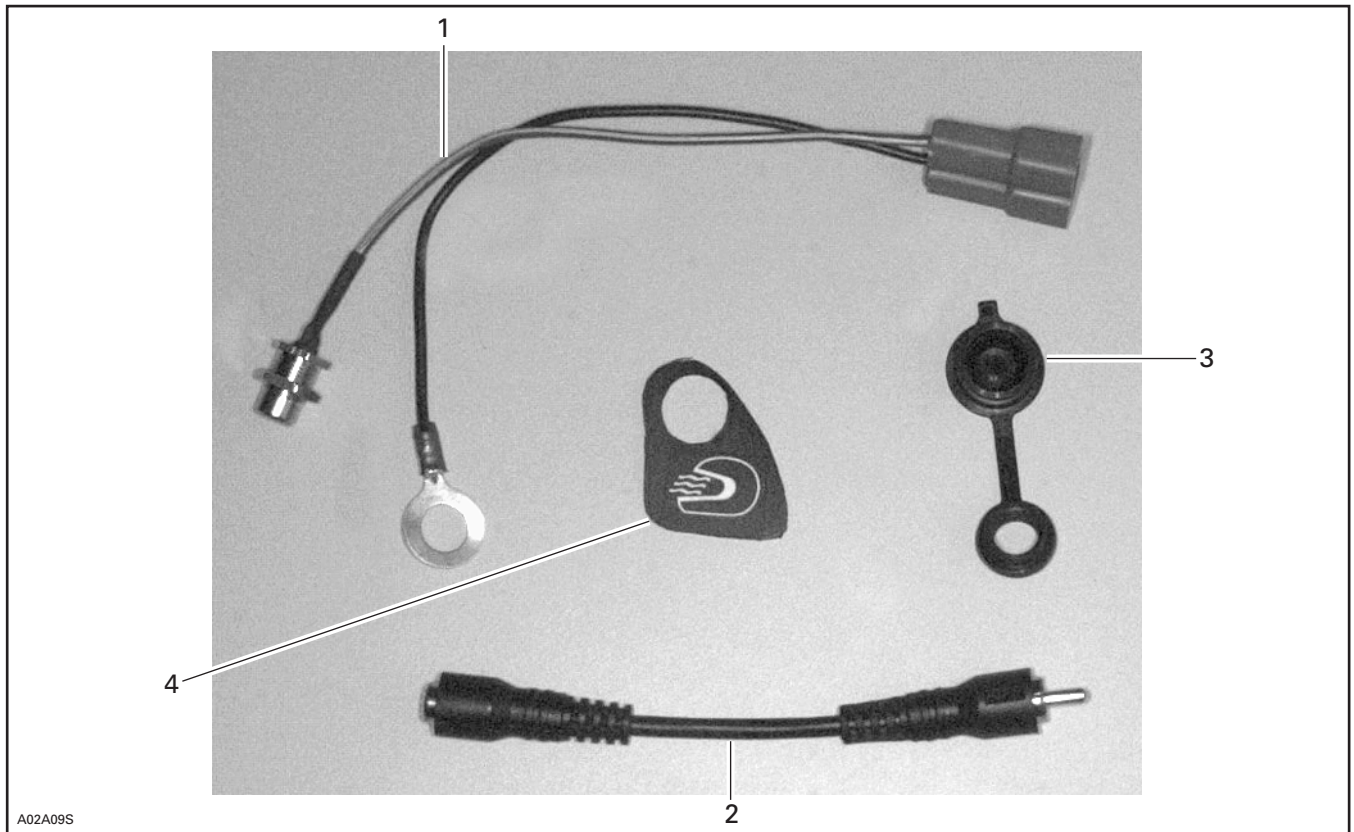

- 1. Wiring Harness
- 2. Visor Outlet Extension

- 3. Protector Cap
- 4. Decal

INSTRUCTION

All Models

Remove air box.
Remove steering pad.
Remove center console retaining screws.

S-Series Models


Temporarily position decal **no. 4** on right side, symmetrical to tether cord adapter, using it as a template to locate hole positioning.

Drill hole using a 12 mm (15/32 in) bit, taking care not to damage wires underneath.

Install decal **no. 4** in its position.

CK3 Models

Hole can be drilled anywhere in the right side molded space. Refer to following photo.

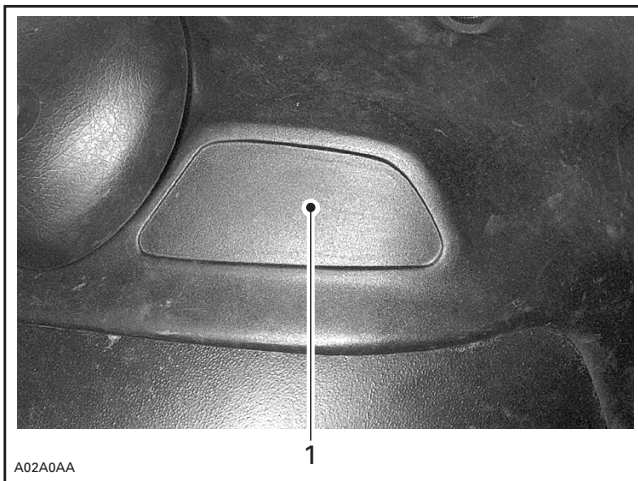


1. Anywhere within this space

All Models

Remove and discard hexagonal nut from wiring harness **no. 1**.

Insert ground wire onto wiring harness fitting and, from underneath, insert wiring harness fitting in hole and retain in place, from outside, with protector cap **no. 3**; tighten firmly.

Locate available (if available) female connector in main wiring harness and connect visor harness male connector. Refer to following photo.

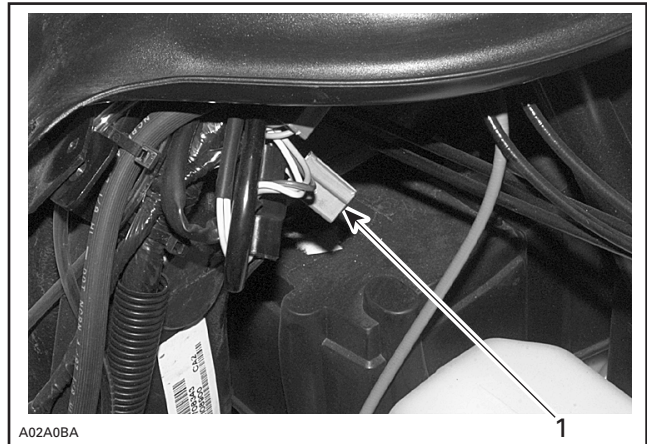

1. Use this connector

If female connector is not available in main harness, locate a YELLOW positive wire and a YELLOW/BLACK negative wire to feed visor harness; this will require cutting of harness male terminal and use of crimping terminals (P/N 409 900 400) (not supplied in this kit).

NOTE: By changing outlet angle, visor outlet extension **no. 2** is provided to allow easy emergency disconnecting **when and if** required.

Reinstall center console.

Reinstall steering pad.

Reinstall air box.

860 702 700

| | | | |
|----|-------------|------------------------|------------------------------|
| 1. | 515 175 111 | Wiring Harness | Faisceau de fils |
| 2. | 515 175 161 | Visor Outlet Extension | Rallonge de prise de visière |
| 3. | 572 103 300 | Protector Cap | Capuchon protecteur |
| 4. | 516 000 277 | Decal | Autocollant |