




FOOTREST KIT
(P/N 861 771 000)

◆ WARNING

For safety reasons, this kit must be installed by an authorized Bombardier snowmobile dealer. Should removal of a locking device be required when undergoing disassembly/assembly, always replace with a new one. This instruction sheet should be given to the purchaser. This kit is designed for specific applicable models only. It is not recommended for units other than those for which it was sold.

NOTE: Installation time is approximately 0.5 hour.

PARTS TO BE INSTALLED

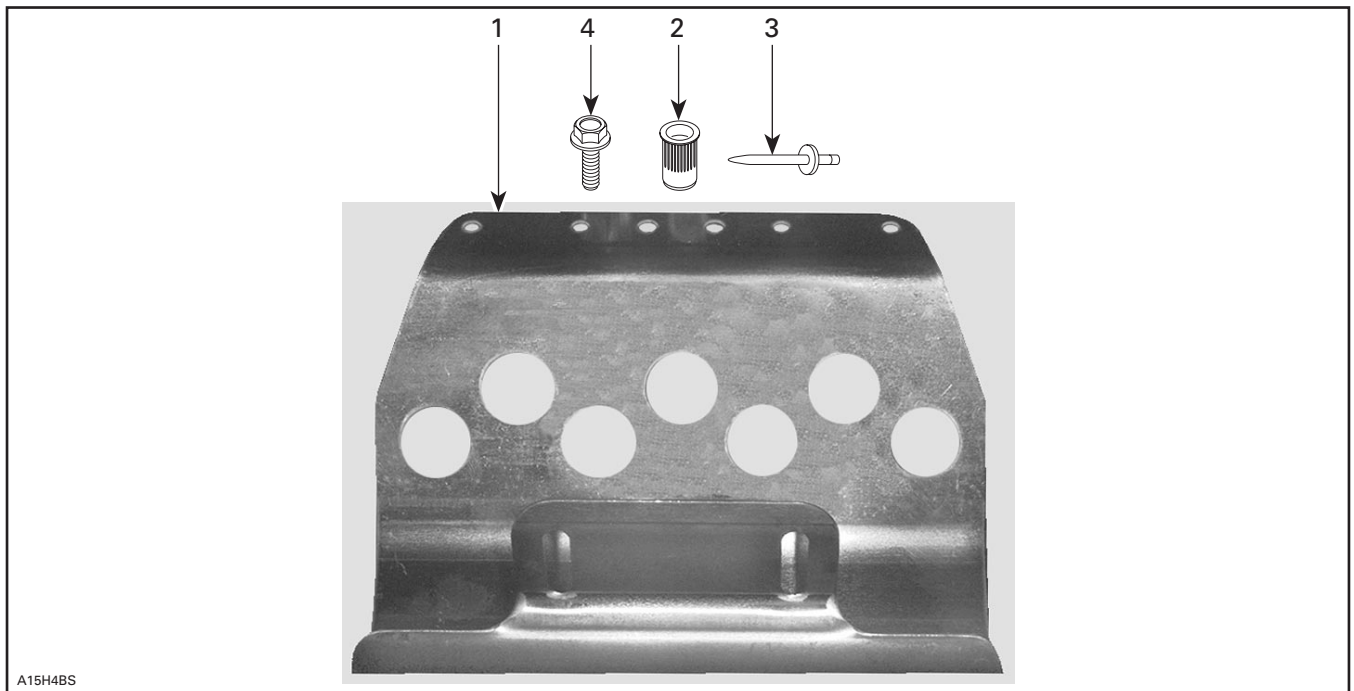

A15H4BS

1. Footrest (2)
2. Insert (4)
3. Rivet (5)
4. Flanged Hexagonal Screw (4)

INSTRUCTION

Lift hood.

Remove both side consoles.

Left Side

Remove pulley guard.

Remove pulley guard rear support by drilling out both rivets; make sure support reinforcement is kept.

Using supplied template, punch center of both positioning holes.


NOTE: Same template will be used for right side by simply reversing it.

Using a 10 mm (25/64 in) bit, drill holes through fixed footrest.

NOTE: Holes might already be there, depending on models, if so, use existing holes.


From outside, slide insert **no. 2** in holes.

Squeeze it tight on fixed footrest by tightening a screw **no. 4** on the outside and retaining the insert with a pair of plier on the inside.

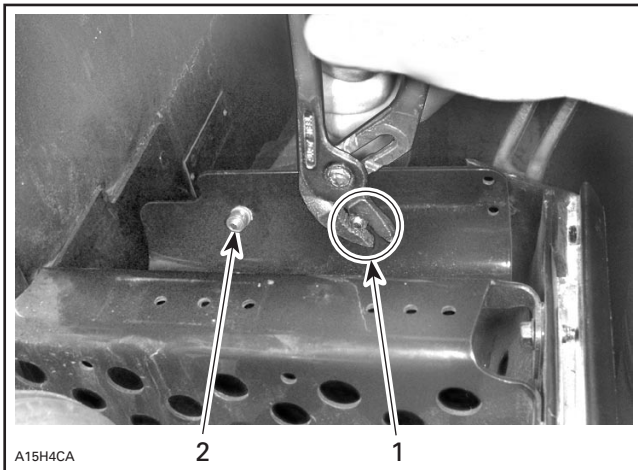

LEFT SIDE SHOWN

1. Retaining insert
2. Insert squeezed on fixed footrest

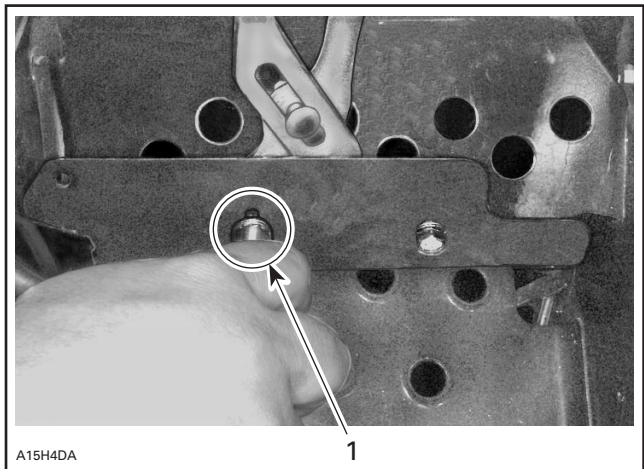

LEFT SIDE SHOWN

1. Squeezing insert on fixed footrest

Once insert squeezed, remove screw **no. 4**.


Position footrest **no. 1** in place.

NOTE: On some models, slight buffing of the footrest lower outside corner might be required in order to ease its positioning.

Secure with screws **no. 4** and align forward holes for riveting operation.

Insert pulley guard support reinforcement.

Align pulley guard support and secure with 3 rivets **no. 3** as shown in next photo.

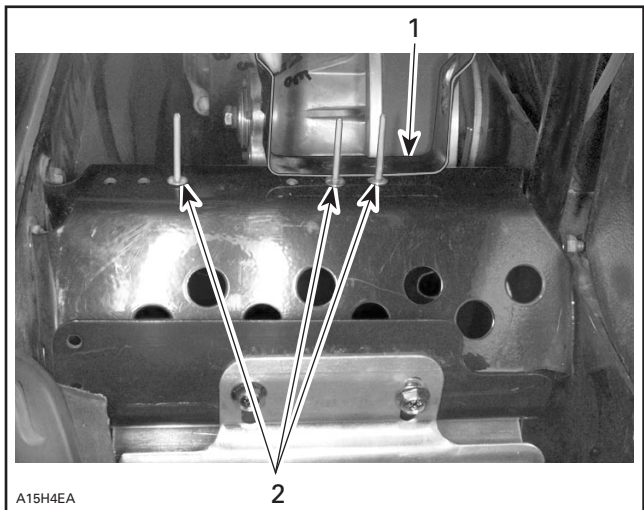


1. Pulley guard support (not rivetted yet)
2. Rivets positioning

Left side installation is now complete.

Reinstall pulley guard and console.

Right Side

Proceed as described above with the difference that footrest is to be secured with 2 rivets **no. 3** only as shown in next photo.

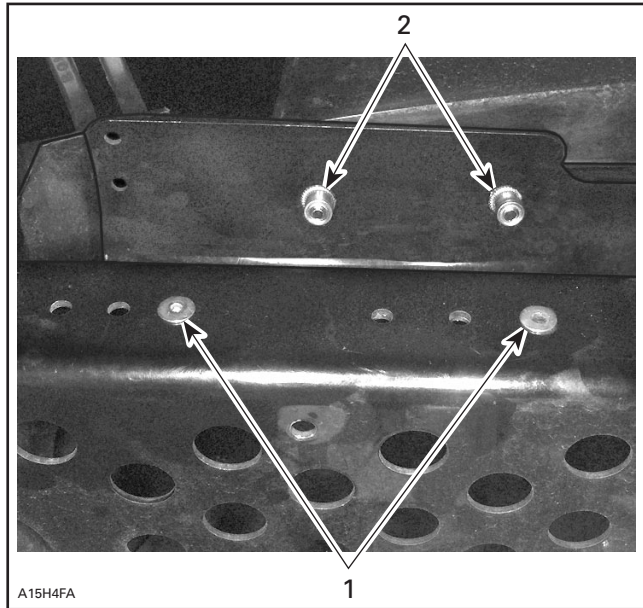


RIGHT SIDE SHOWN

1. Rivets positioning
2. Inserts

Reinstall console and close hood.

THIS PAGE IS PURPOSELY BLANK

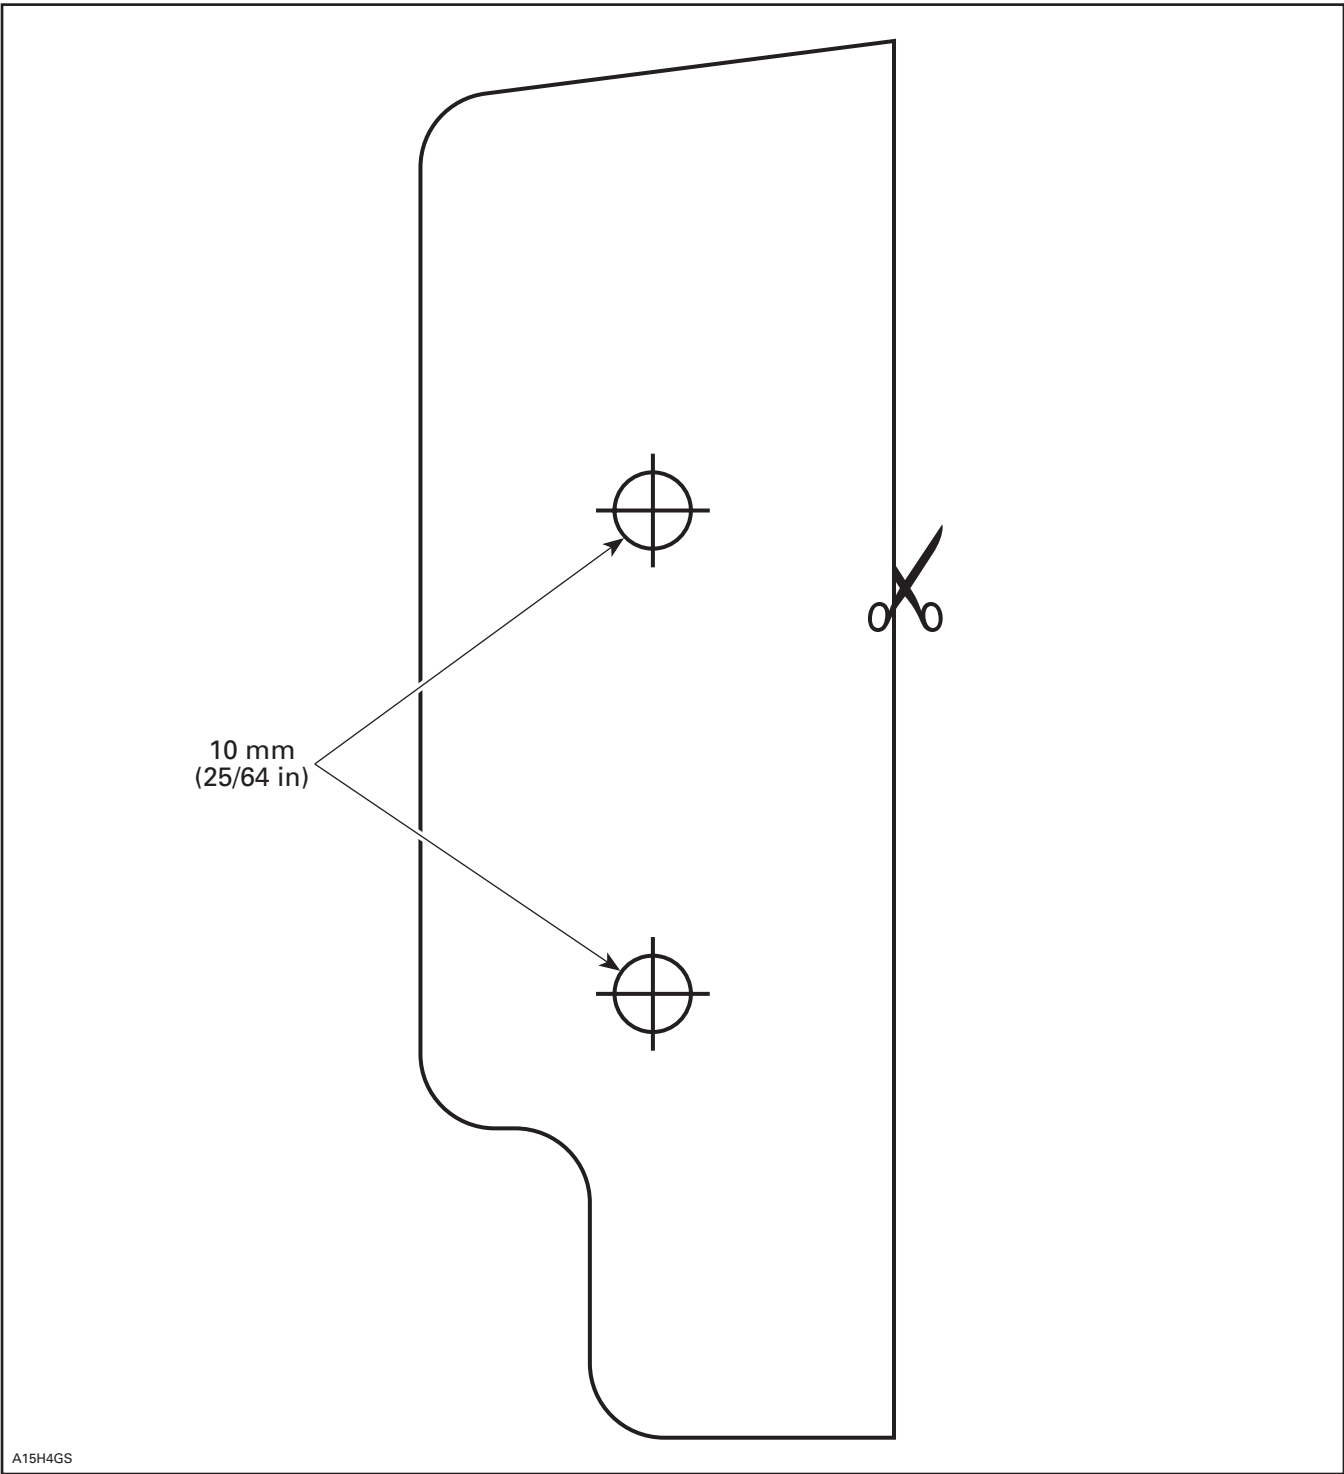

861 771 000

1.	518 321 571	Footrest (2)	Repose-pied (2)
2.	415 107 300	Insert (4)	Pièce d'ancrage (4)
3.	390 402 300	Rivet (5)	Rivet (5)
4.	207 661 644	Flanged Hexagonal Screw (4)	Vis hexagonale à épaulement (4)