




**CONVERTIBLE SEAT
(P/N 861 772 100)**

⚠ WARNING

For safety reasons, this kit must be installed by an authorized Ski-Doo® snowmobile dealer. Should removal of a locking device (e.g. lock tabs, self-locking fasteners, etc.) be required when undergoing disassembly/assembly, always replace with a new one. This instruction sheet should be given to the purchaser. This kit is designed for specific applicable models only. It is not recommended for units other than those for which it was sold.

NOTE: Installation time is approximately 0.7 hour.

PARTS TO BE INSTALLED

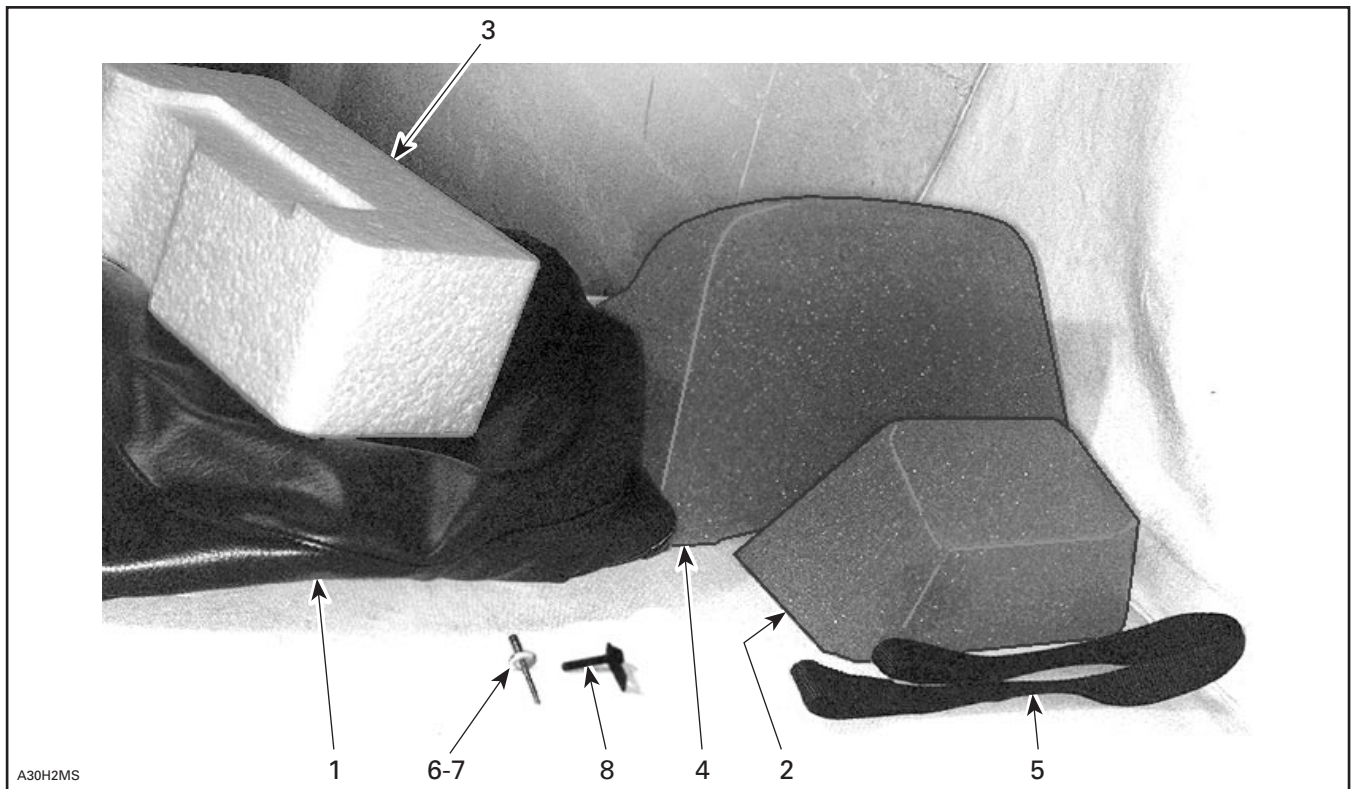

- | | |
|-------------------|------------------------------------|
| 1. Cover | 6. Rivet (3/16) (2) |
| 2. Box Foam | 7. Rivet |
| 3. Lower Box Foam | 8. Plate with Screw (2) |
| 4. Passenger Foam | 9. Warning Label (not illustrated) |
| 5. Seat Belt | |

INSTRUCTION

Remove tail/stop lamp lens and housing, discard housing screws.

Disconnect wiring connector and set lamp aside.

Remove seat and place it on a clean working bench.

Remove existing cover; pull out anchor belt by twisting its retaining plate from inside storage compartment.

Turn seat base upside down.

Using tail/stop lamp housing screw hole, insert from the outside a *plate with screw no. 8* and use its hole as a template to drill a 5 mm (13/64 in) hole on each side through base.

Now insert each *plate with screw* from inside and secure them to base with a rivet **no. 6**, from the outside. Refer to following photo.



SHOWS "PLATE WITH SCREW" ALREADY RIVETED

Insert box foam **no. 2** and lower box foam **no. 3** in storage compartment from underneath.

Turn seat right way out and align passenger foam **no. 4** onto existing foam at rear, 38 mm (1-1/2 in) from rear edge of back rest.

Draw a line all around passenger foam; this will delimit the surface on which glue will be applied.


Apply Lepage[†] Pres-tite contact glue or equivalent on the entire surface and stick passenger foam in place.

Allow drying period as recommended on supplier's glue container.

Install new cover **no. 1** and insert anchor belt; working from inside storage compartment, twist retaining plate so it locks belt in place.

Staple cover all around.

Drill a 5 mm (13/64 in) hole to retain seat belt, as per following photo.

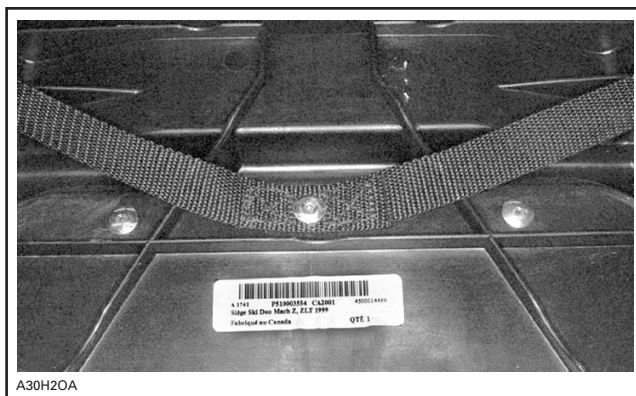

SHOWS BELT ALREADY SECURED

Install seat belt **no. 5** around the seat and secure it to base using rivet **no. 7**.

Install seat.

Connect tail/stop lamp wiring connectors.

Secure housing and lens.

Install warning label **no. 9**.

Installation is now complete.

[†] Trademark of Henkel.

861 772 100

1.	510 003 874	Cover	Housse
2.	510 003 875	Box Foam	Mousse centrale
3.	510 003 876	Lower Box Foam	Mousse inférieure
4.	510 003 870	Passenger Foam	Mousse supérieure
5.	510 003 877	Seat Belt	Courroie de siège
6.	390 901 700	Rivet (3/16) (2)	Rivet (3/16) (2)
7.	390 909 900	Rivet	Rivet
8.	510 003 880	Plate with Screw (2)	Plaque avec vis (2)
9.	414 935 000	Warning Label (not illustrated)	Étiquette d'avertissement (non illustrée)