



⚠ WARNING

For safety reasons, this kit must be installed by an authorized Ski-Doo® snowmobile dealer. Should removal of a locking device (e.g. lock tabs, self-locking fasteners, etc.) be required when undergoing disassembly/assembly, always replace with a new one. This instruction sheet should be given to the purchaser. This kit is designed for specific applicable models only. It is not recommended for units other than those for which it was sold.

NOTE: Installation time is approximately 0.5 hour.

PARTS TO BE INSTALLED

This kit consists of:

1. RH Side Mirror (P/N 414 971 910)
2. LH Side Mirror (P/N 414 972 010)

INSTRUCTIONS


NOTE: This mirror kit is a S-Series type mirror kit to be used on CK3, ZX and F-Series models as well.

All Series Models

Simply select required template, drill holes as shown and install mirrors.


S-SERIES LEFT (OPTION 1)
(FLIP FOR RIGHT)

SÉRIES S GAUCHE
(RETOURNER POUR
CÔTÉ DROIT)

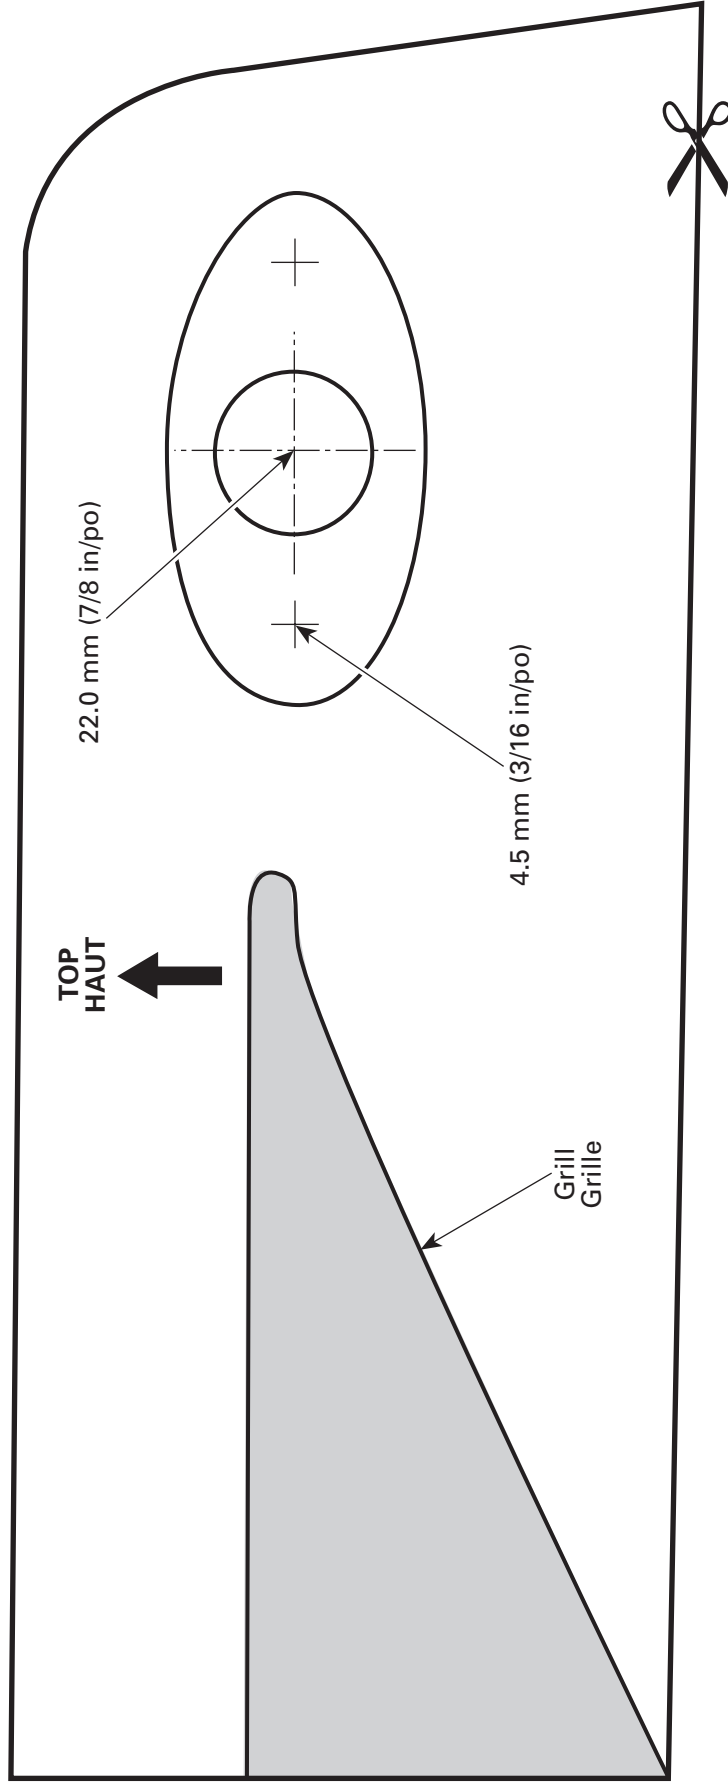


S-SERIES LEFT (OPTION 2)
(FLIP FOR RIGHT)

SÉRIES S GAUCHE
(RETOURNER POUR
CÔTÉ DROIT)

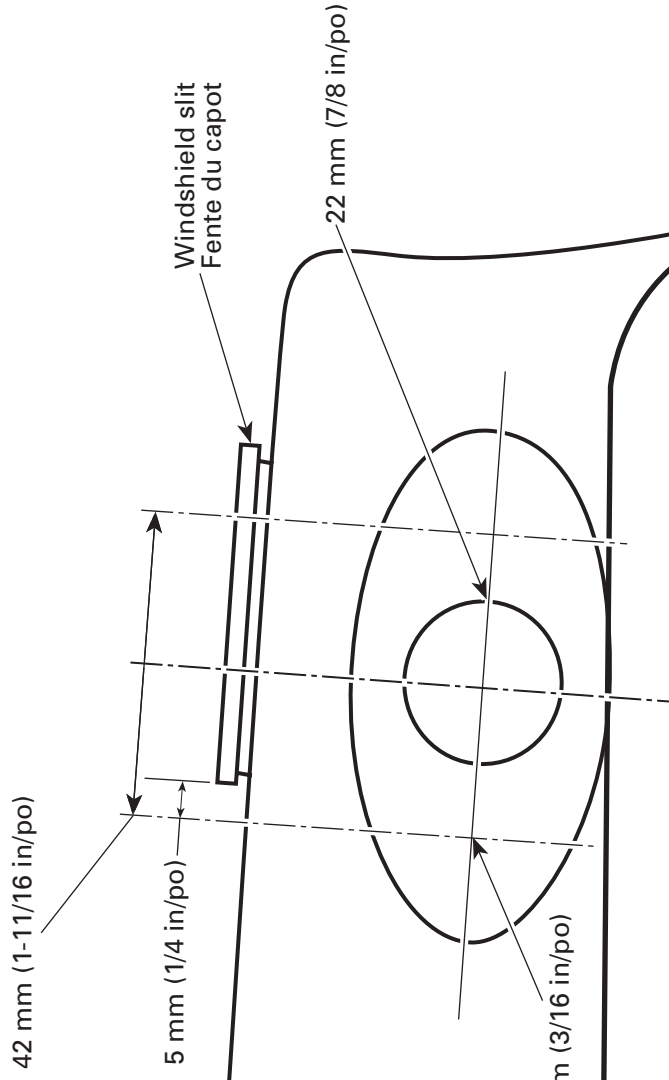


TOP
HAUT

Grill
Grille

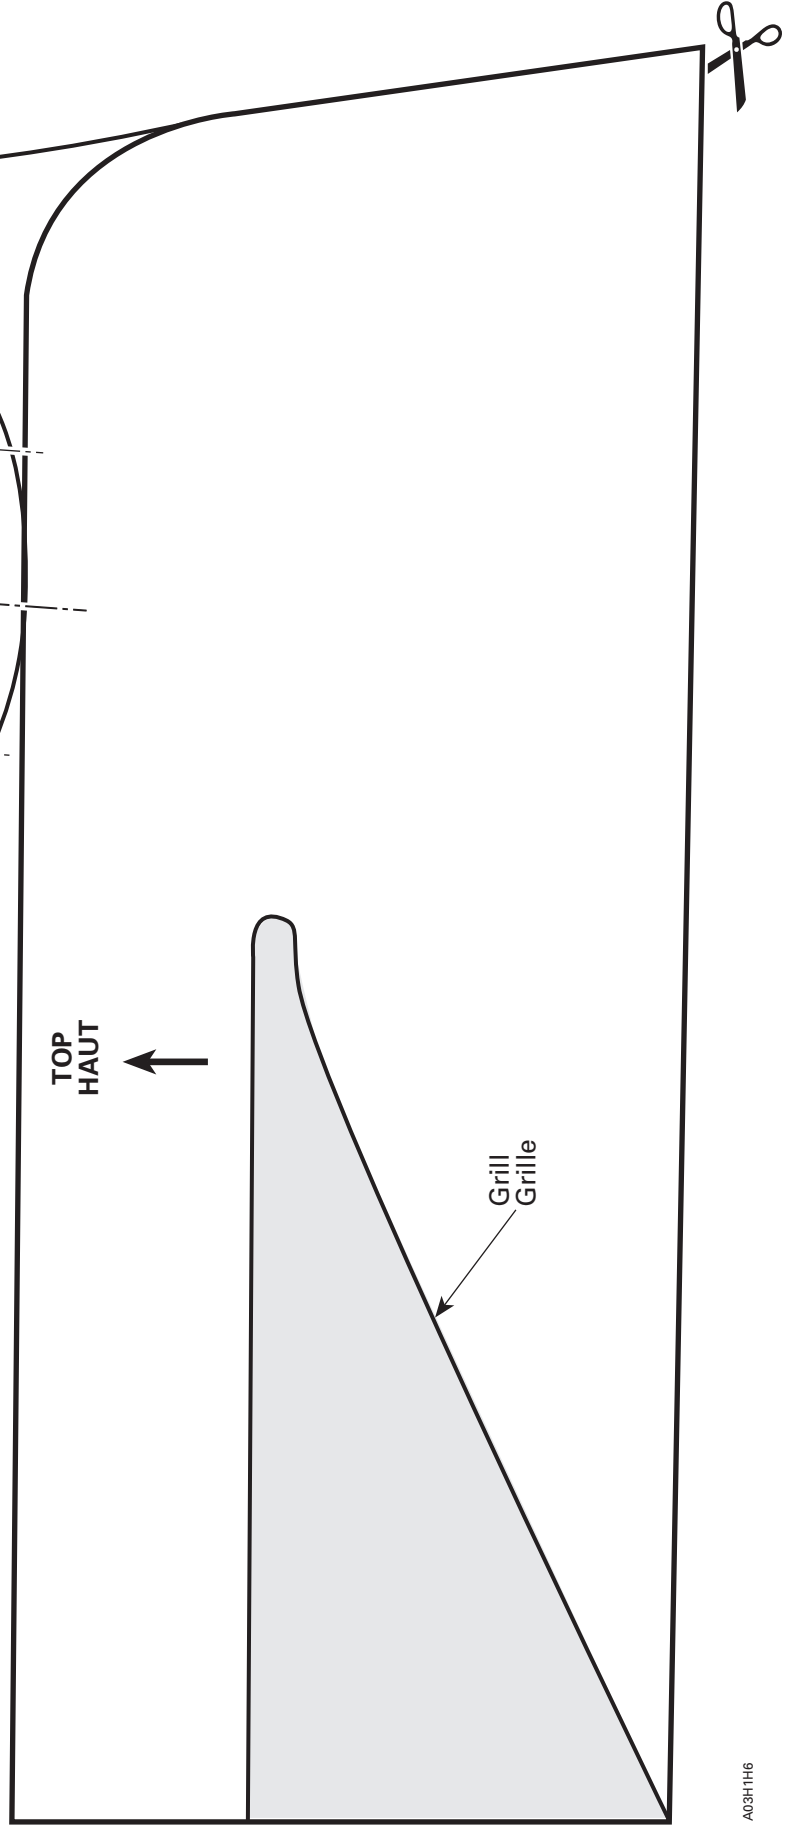


CK Series/Série CK

RIGHT SIDE CÔTÉ DROIT

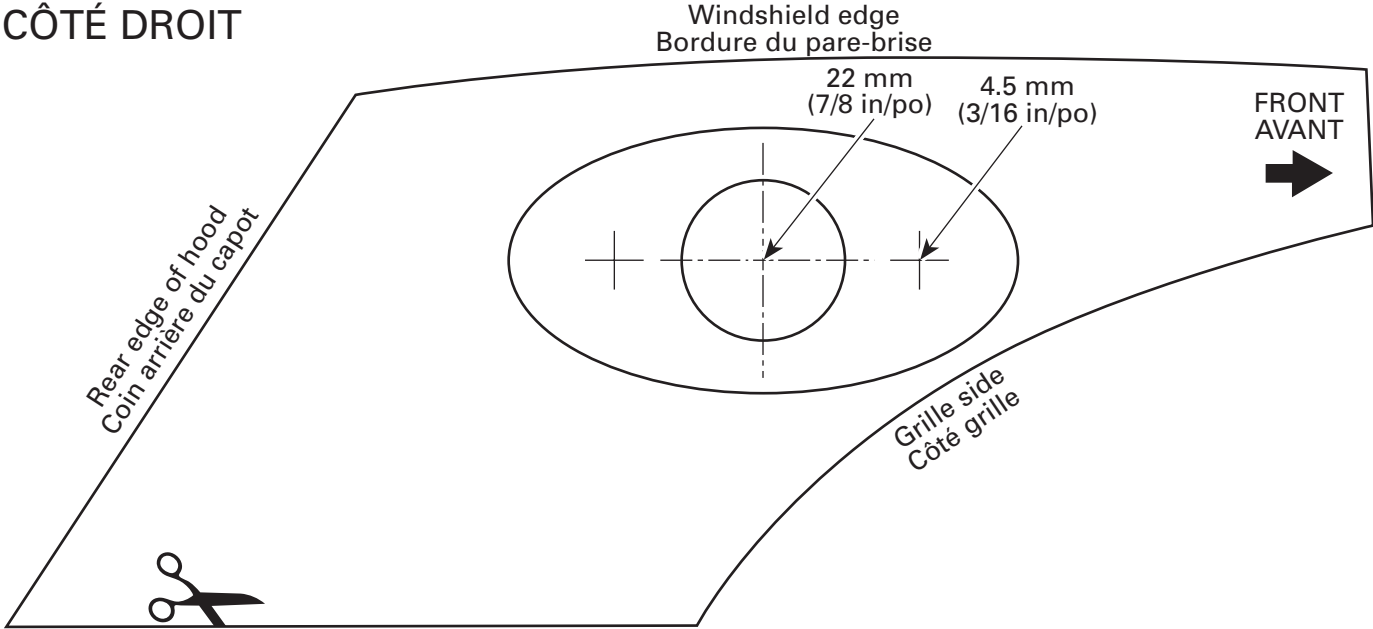

LEFT SIDE CÔTÉ GAUCHE

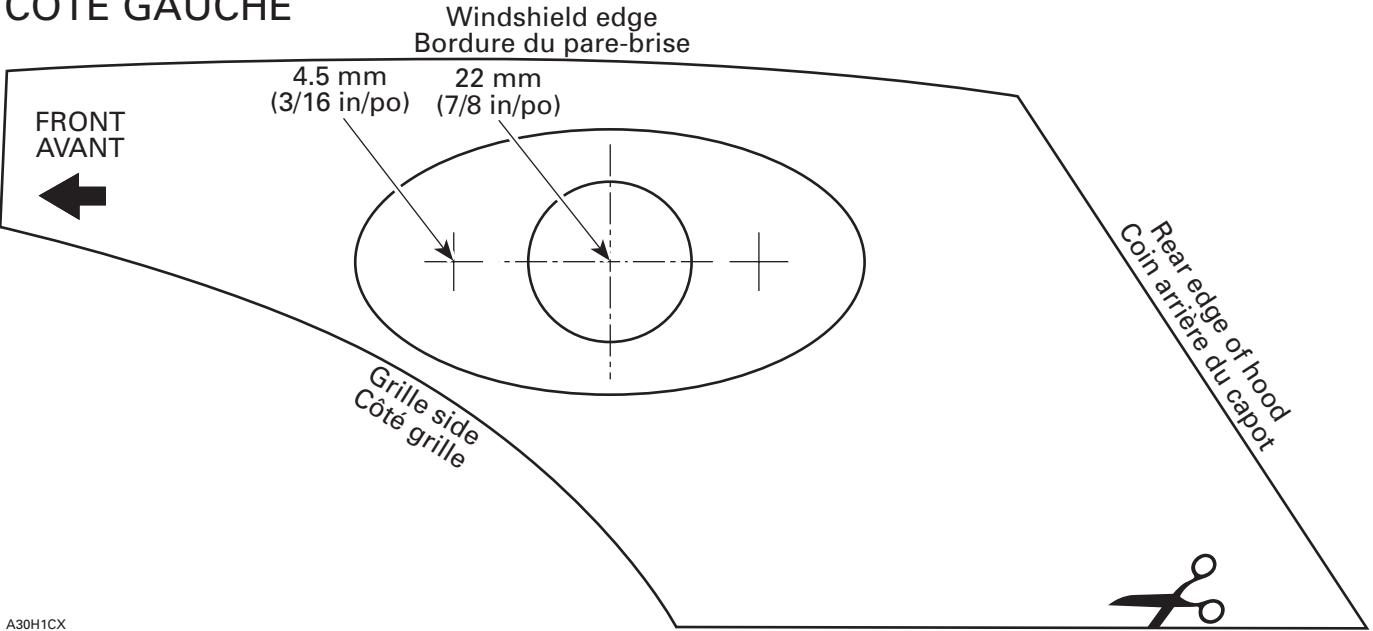

F-SERIES LEFT
(FLIP FOR RIGHT)

SÉRIE F GAUCHE
(RETOURNER POUR
CÔTÉ DROIT)

Remove windshield
Enlever le pare-brise


TOP
HAUT

4.5 mm (3/16 in/po)

22.0 mm (7/8 in/po)



ZX Series/Série ZX

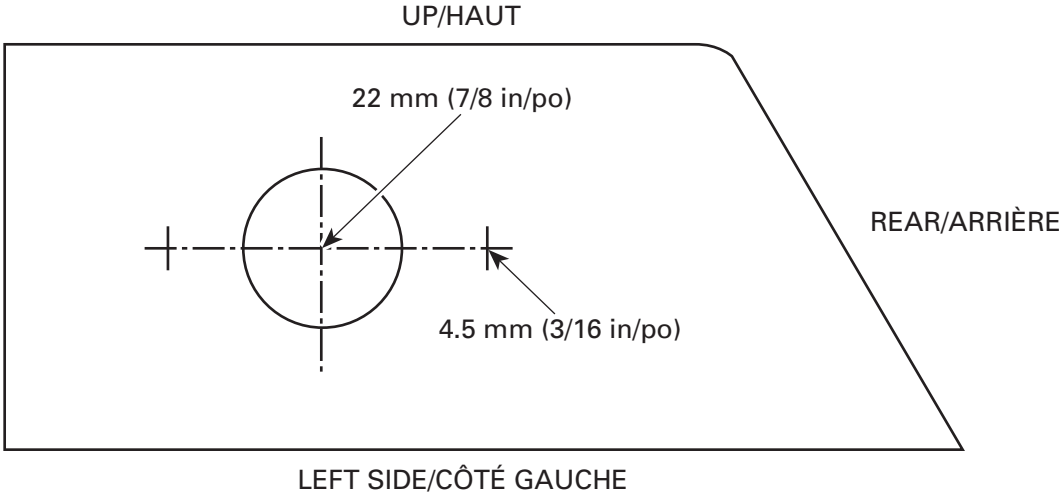

A32H1ES

(Flip for RIGHT side/retourner pour côté DROIT)