




**HEATED VISOR CONNECTOR
(P/N 861 506 600)**

⚠ WARNING

For safety reasons, this kit must be installed by an authorized Ski-Doo® snowmobile dealer. Should removal of a locking device (e.g. lock tabs, self-locking fasteners, etc.) be required when undergoing disassembly/assembly, always replace with a new one. This instruction sheet should be given to the purchaser. This kit is designed for specific applicable models only. It is not recommended for units other than those for which it was sold.

NOTE: Installation time is approximately 0.5 hour.

PARTS TO BE INSTALLED

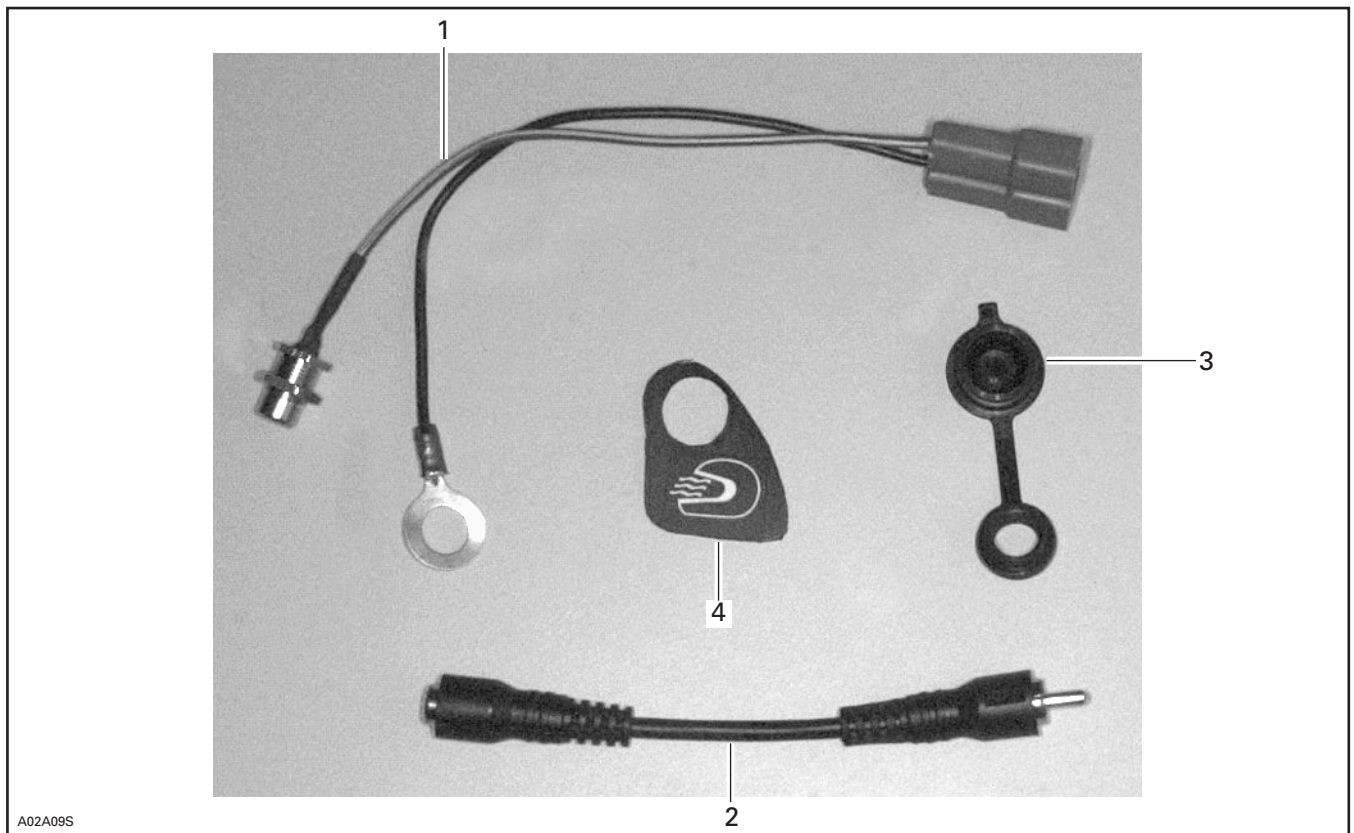

- 1. Wiring Harness
- 2. Visor Outlet Extension
- 3. Protector Cap
- 4. Decal
- 5. Locking Tie (not illustrated)

INSTRUCTION

All Models

Remove air box.

Remove steering pad.

Remove center console retaining screws.

S-Series Models


Temporarily position decal no. 4 on right side, symmetrical to tether cord adapter, using it as a template to locate hole positioning.

Drill hole using a 12 mm (15/32 in) bit, taking care not to damage wires underneath.

Install decal no. 4 at its position.

CK3 Models

Hole can be drilled anywhere in the right side molded space. Refer to following photo.

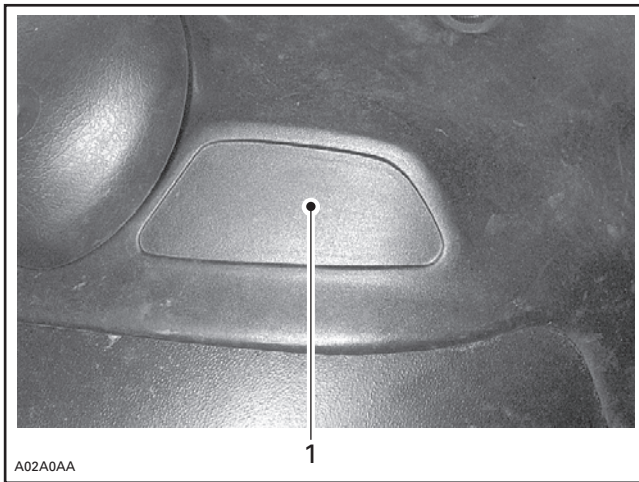


1. Anywhere within this space

Use decal no. 4 as a template, drill hole and install decal accordingly.

ZX Models

Using template at the end of this instruction sheet, mark hole location and drill hole at provided place. Refer to following photo.

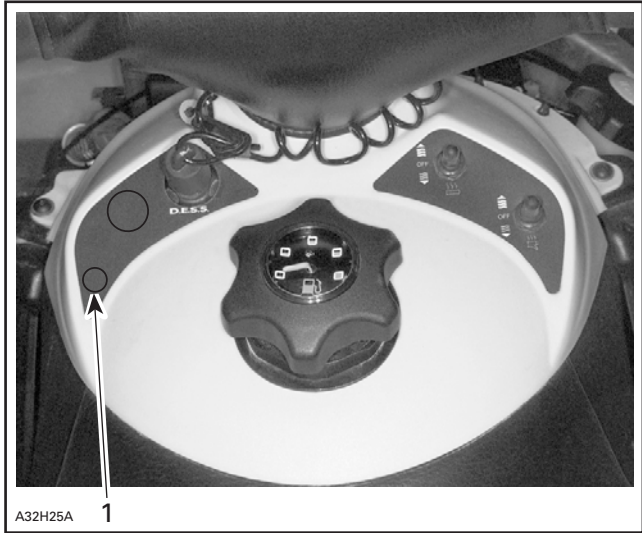


1. Drill here

All Models

Remove and discard hexagonal nut from wiring harness no. 1.

Insert ground wire onto wiring harness fitting and, from underneath, insert wiring harness fitting in hole and retain in place, from outside, with protector cap no. 3; tighten firmly.

Locate available (if available) female connector in main wiring harness and connect visor harness male connector. Refer to following photo.

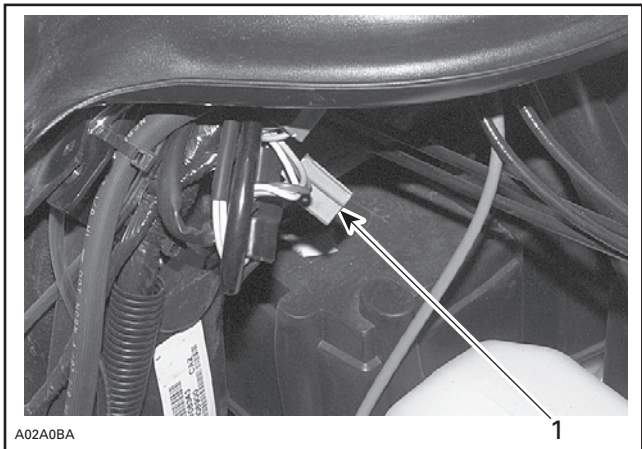

1. Use this connector

If female connector is not available in main harness, locate a YELLOW positive wire and a YELLOW/BLACK negative wire to feed visor harness; this will require cutting of harness male terminal and use of crimping terminals (P/N 409 900 400) (not supplied in this kit).

Where required, use locking tie **no. 5** to secure visor harness which is supplied longer in order to fit all models.


NOTE: By changing outlet angle, visor outlet extension **no. 2** is provided to allow easy emergency disconnecting **when and if** required.

Reinstall center console.

Reinstall steering pad.

Reinstall air box.

TEMPLATE FOR ZX MODELS

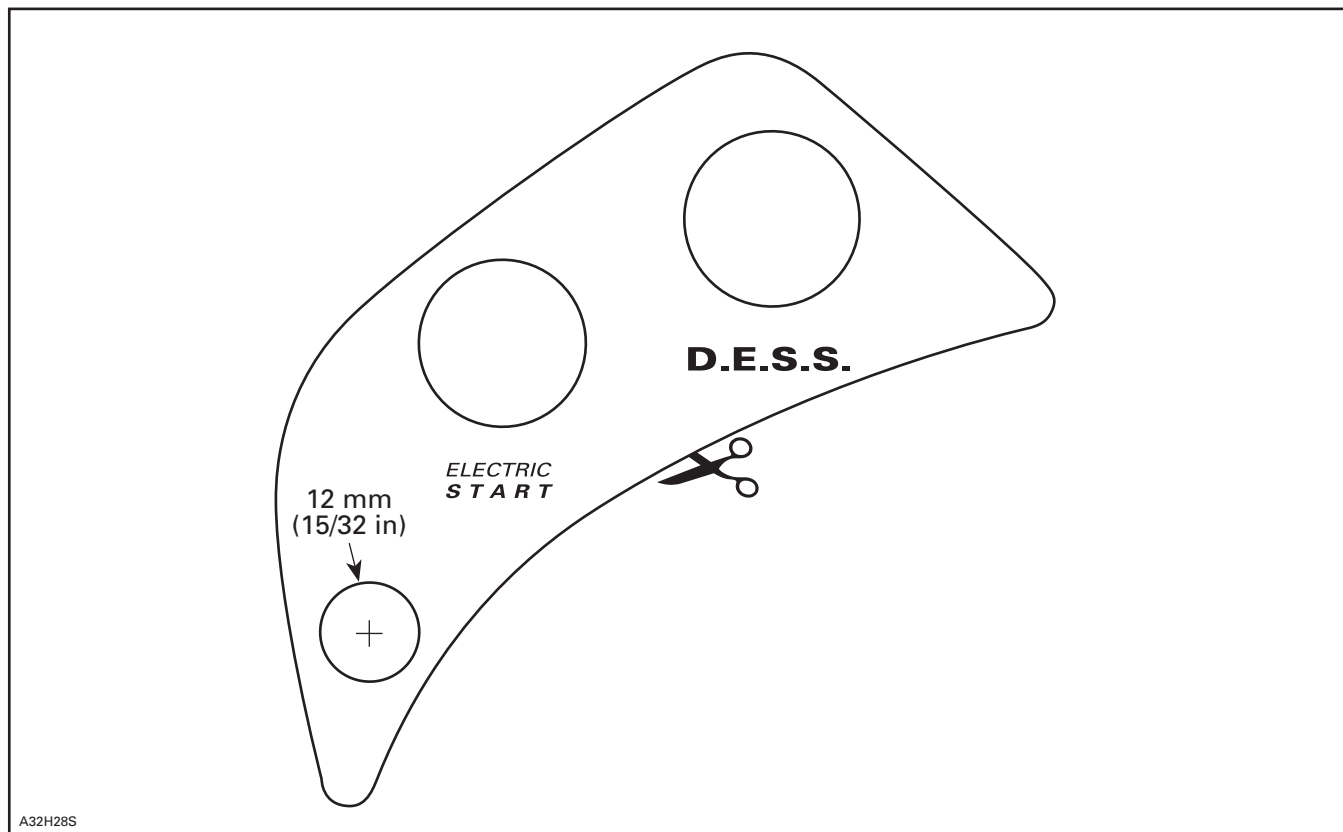

861 506 600

1.	515 175 590	Wiring Harness	Faisceau de fils
2.	515 175 161	Visor Outlet Extension	Rallonge de prise de visière
3.	572 103 300	Protector Cap	Capuchon protecteur
4.	516 000 277	Decal	Autocollant
5.	414 115 200	Locking Tie	Attache