



**⚠ WARNING**

For safety reasons, this kit must be installed by an authorized Ski-Doo® snowmobile dealer. Should removal of a locking device (e.g. lock tabs, self-locking fasteners, etc.) be required when undergoing disassembly/assembly, always replace with a new one. This instruction sheet should be given to the purchaser. This kit is designed for specific applicable models only. It is not recommended for units other than those for which it was sold.

**NOTE:** Installation time is approximately 0.5 hour.

Following illustration shows retaining plate installed:

## PARTS TO BE INSTALLED

Kit, (not illustrated), consists of:


1. Mirror Assembly (RH) (P/N 517 302 471)
2. Mirror Assembly (LH) (P/N 517 302 472)
3. Flat Washer (4) (P/N 517 124 300)
4. Elastic Stop Nut (4) (P/N 232 541 414)
5. Retaining Plate (2) (P/N 517 302 539)

## INSTRUCTIONS

Use template at the end of the present instruction sheet to locate and drill the two 5 mm (13/64 in) holes.

Install right side mirror **no. 1** on the outside and retaining plate **no. 5** on the inside and secure from underneath with flat washers **no. 3** and elastic stop nuts **no. 4**.


Repeat procedure with left side mirror **no. 2**.

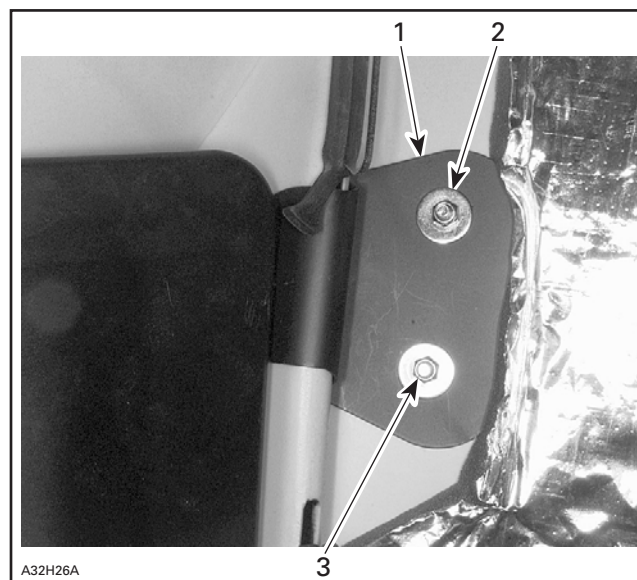

1. Retaining plate
2. Flat washer
3. Elastic stop nut

THIS PAGE IS  
PURPOSELY BLANK

# TEMPLATES

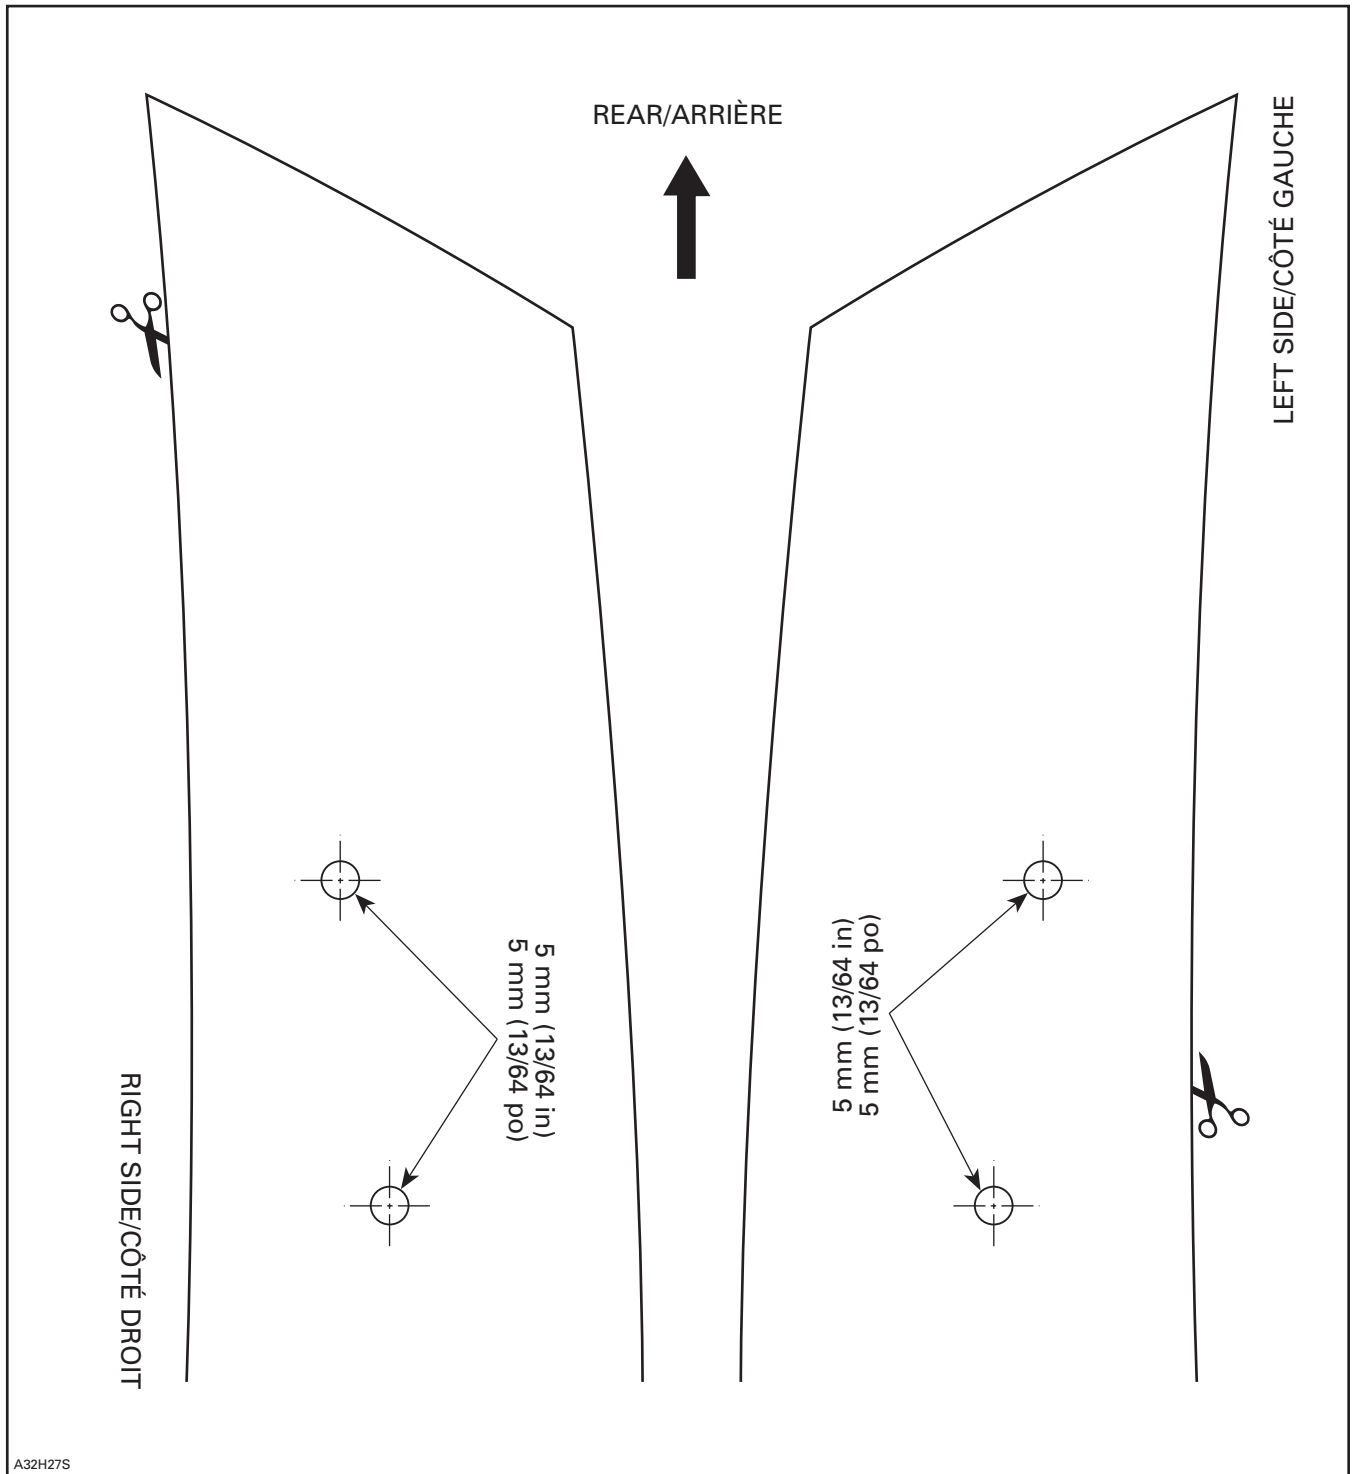

## 861 776 800

1.	517 302 471	Mirror Assembly RH	Rétroiseur droit (complet)
2.	517 302 472	Mirror Assembly LH	Rétroiseur gauche (complet)
3.	517 124 300	Flat Washer (4)	Rondelle plate (4)
4.	232 541 414	Elastic Stop Nut (4)	Écrou d'arrêt élastique (4)
5.	517 302 539	Retaining Plate (2)	Plaque de retenue (2)